


Front Door Alignment

Inspection

NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.


1. Inspect the front door-to-body dimensions.

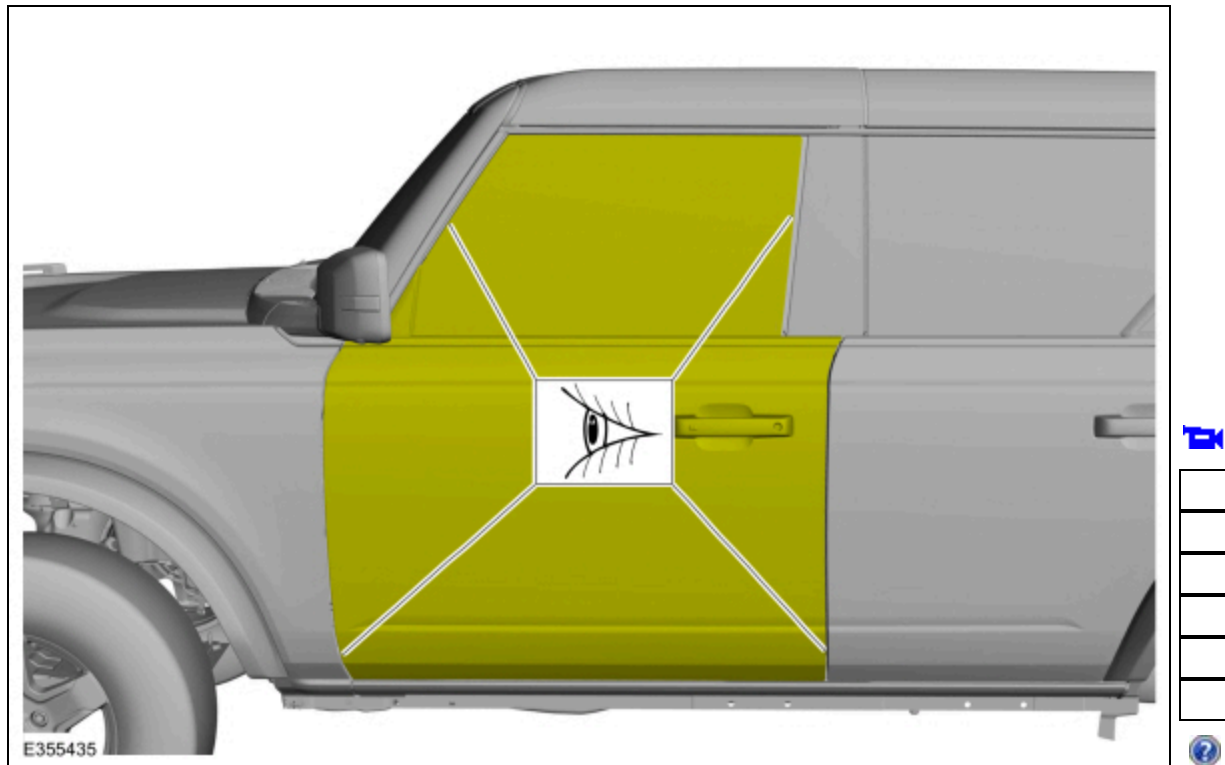

Adjustment

All alignments

1. Open the door.

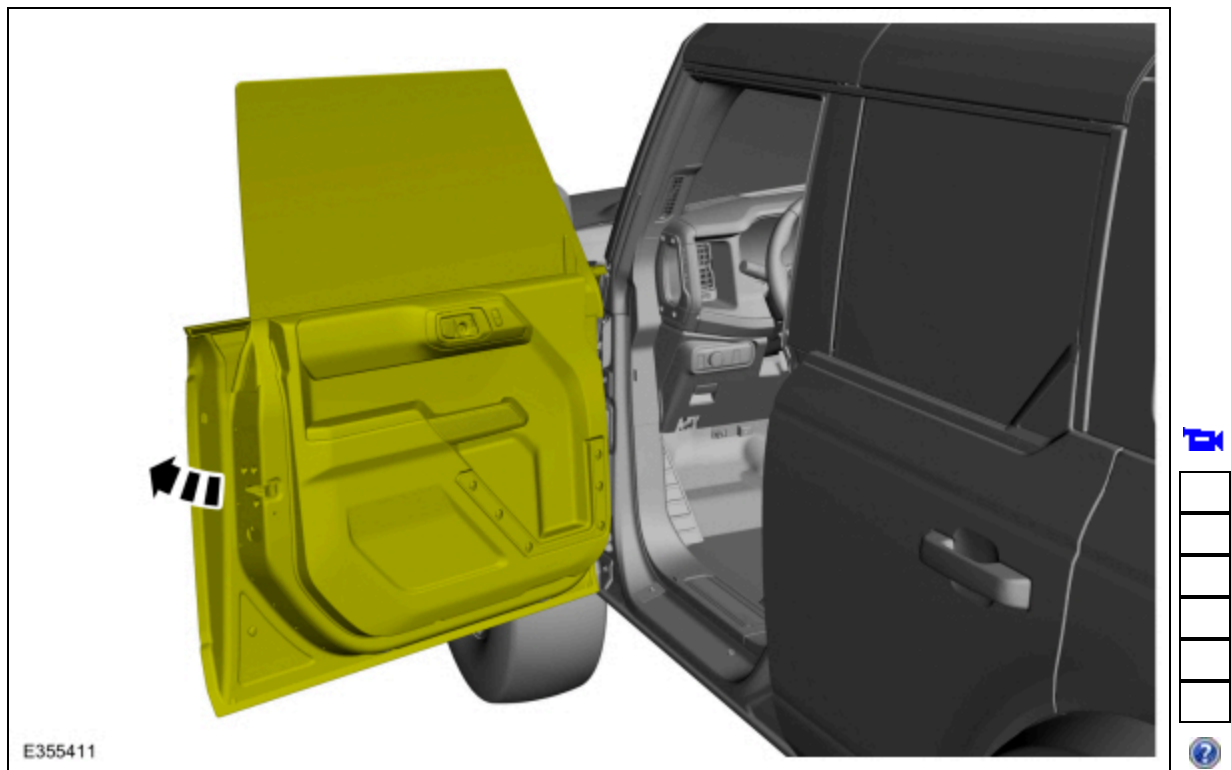

2. Remove the bolts and the striker assembly.




Front door in and out, up and down alignment


3. Loosen the bolts to permit movement of the door.

Loosen:


: 2 turn(s)

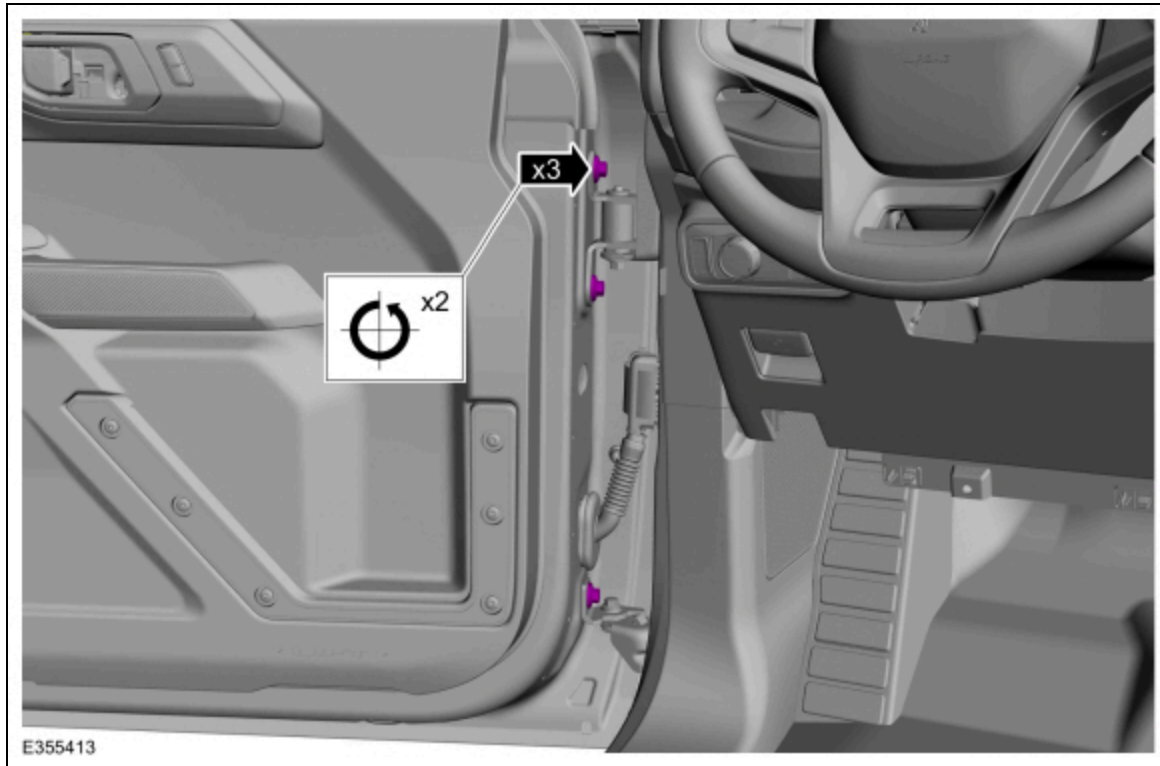

4. Adjust the door as required.

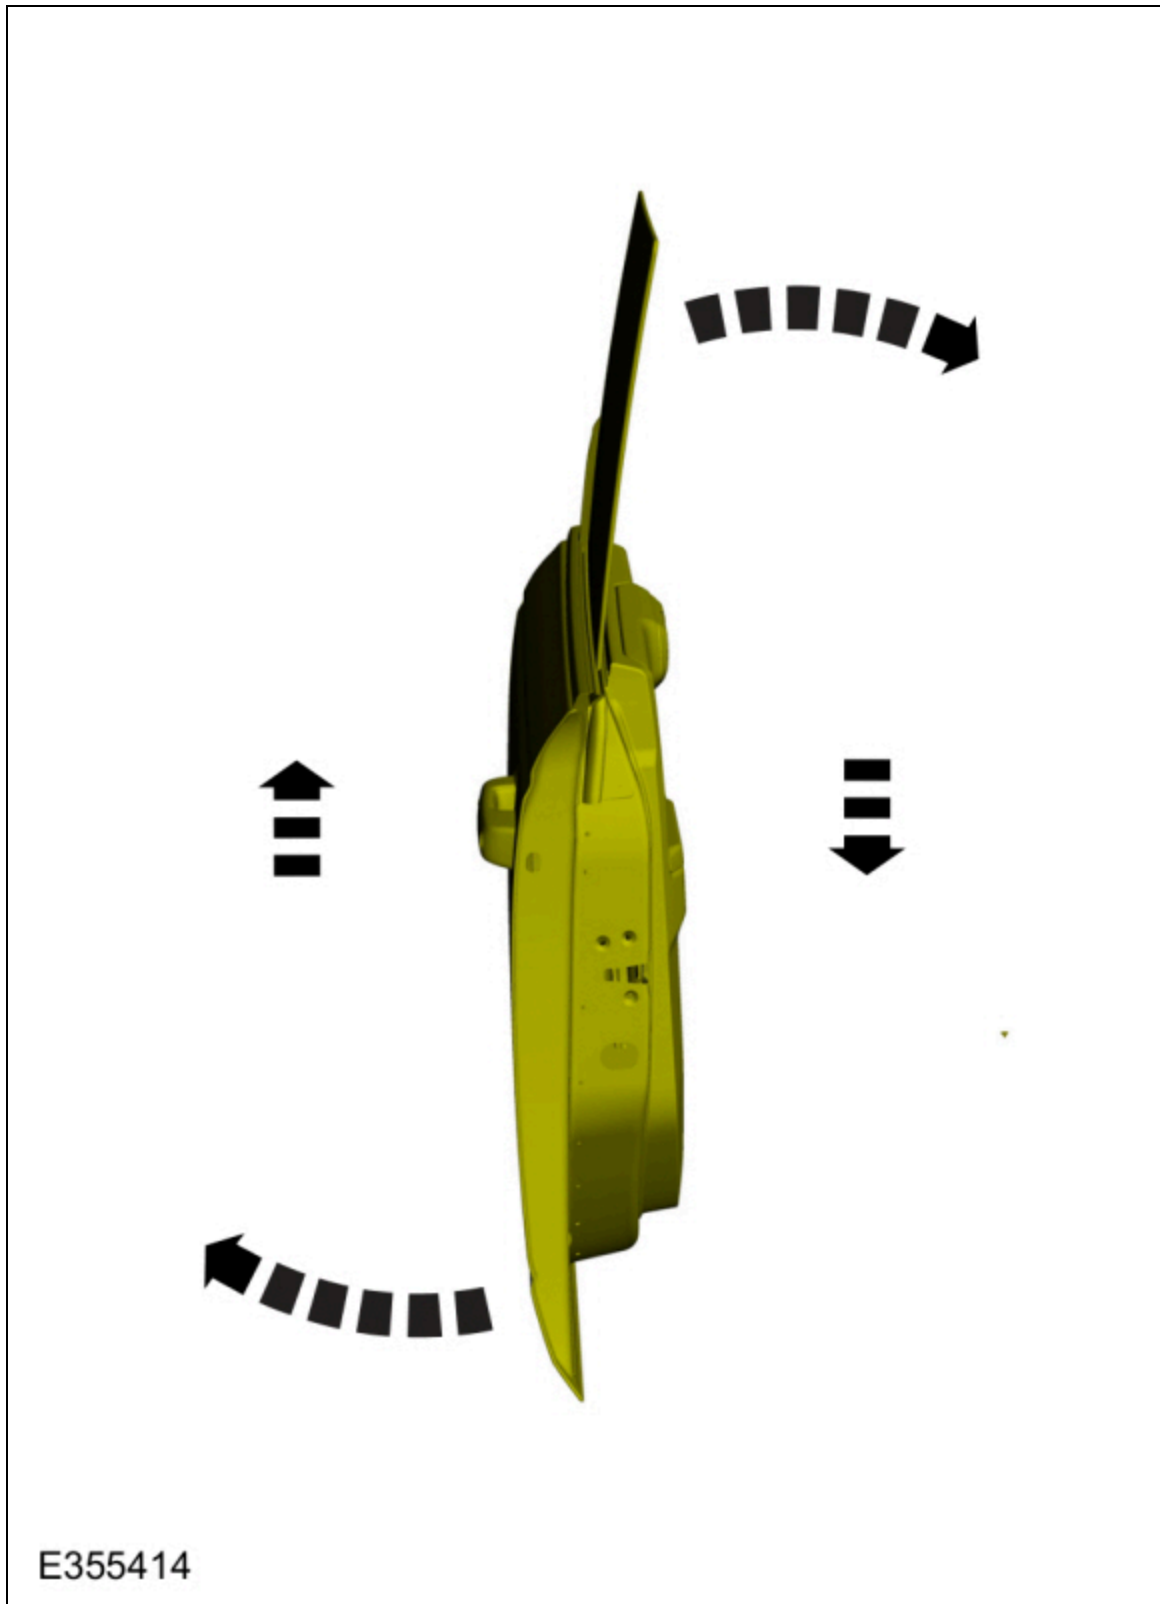


- 5. Tighten the bolts.
Torque: 41 lb.ft (55 Nm)

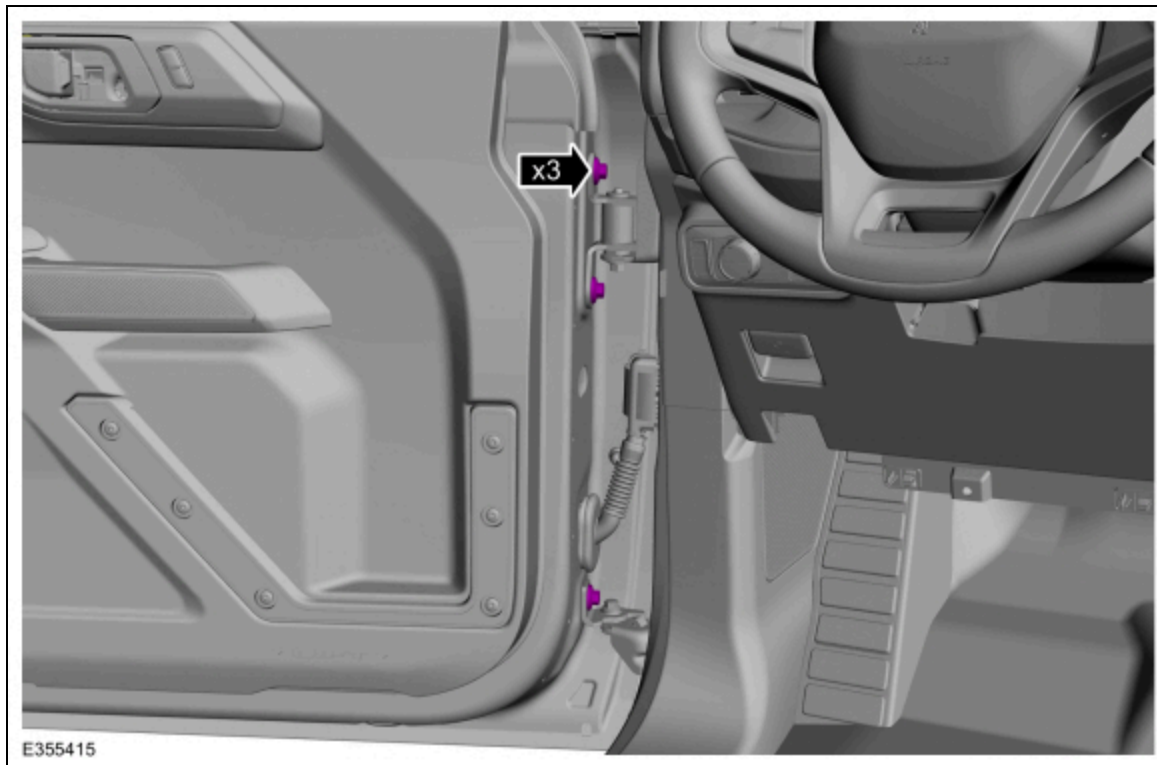


Front door fore, aft and tilt alignment


- 6. Loosen the bolts to permit movement of the door.
Loosen:
: 2 turn(s)

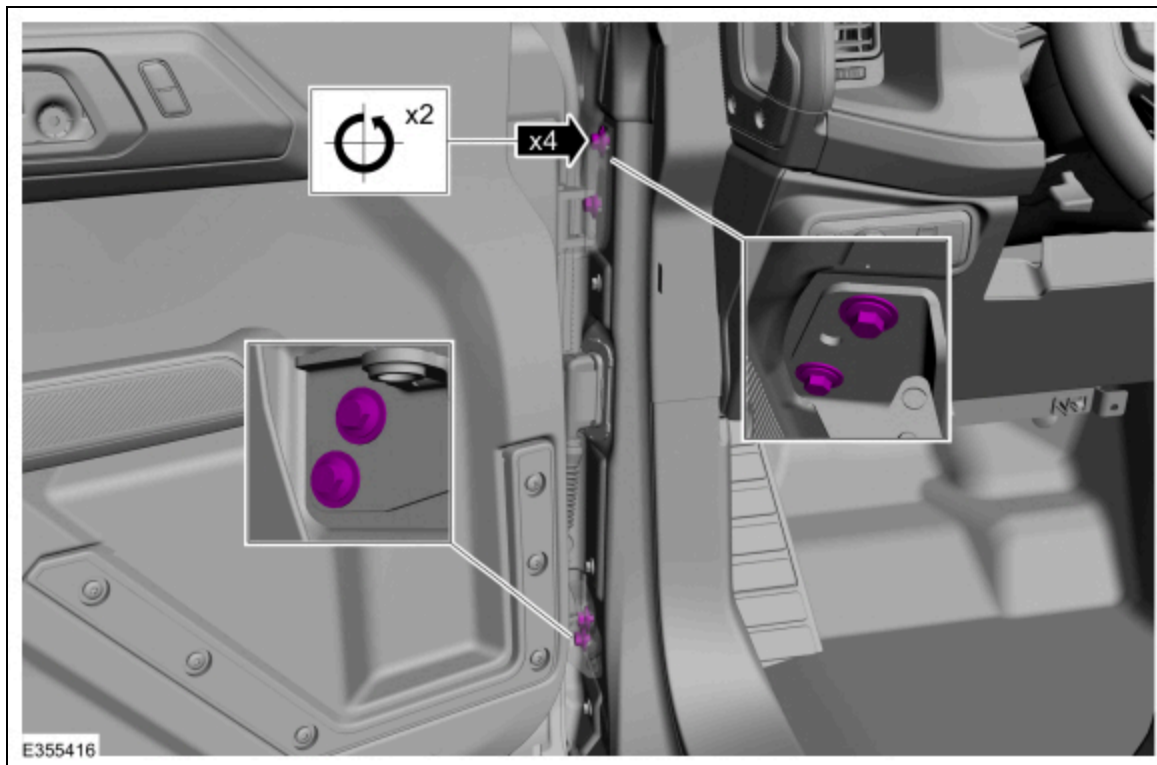


- 7. Carefully close the door.

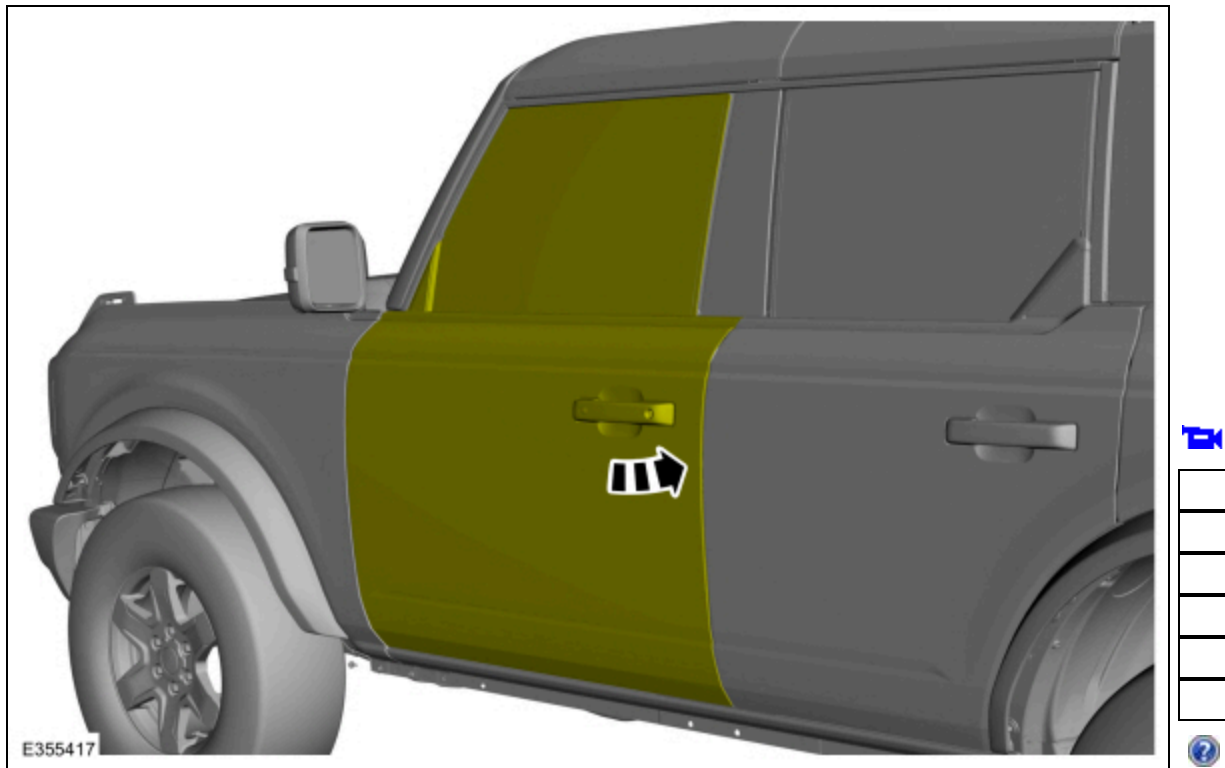

8. Adjust the door as required.

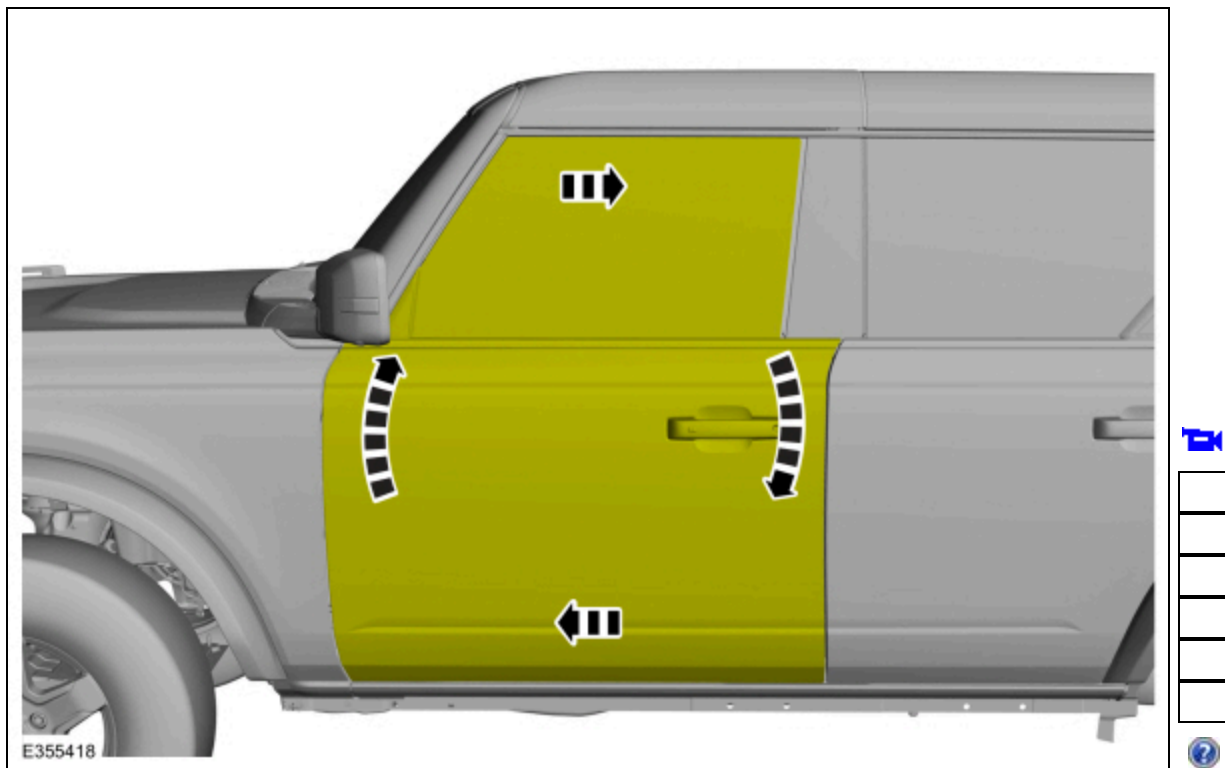


9. Carefully open the door.

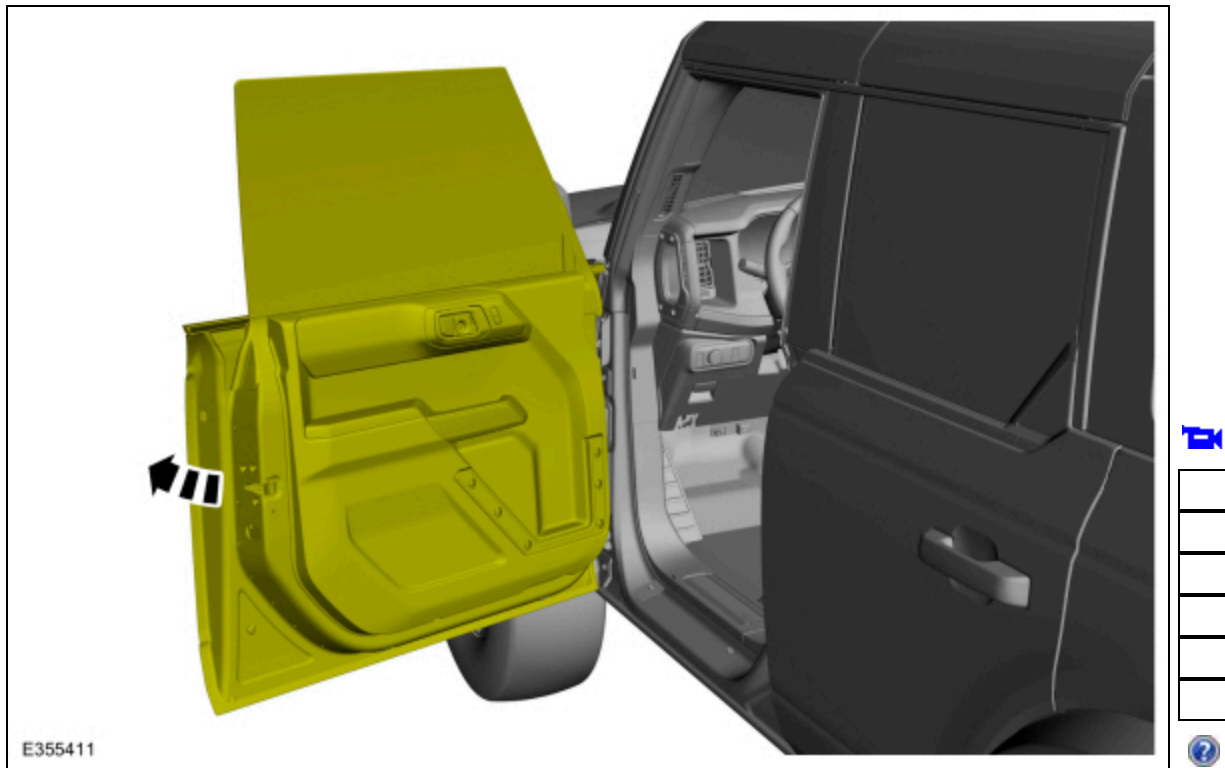

E355411


- 10. Tighten the bolts.
Torque: 24 lb.ft (32 Nm)

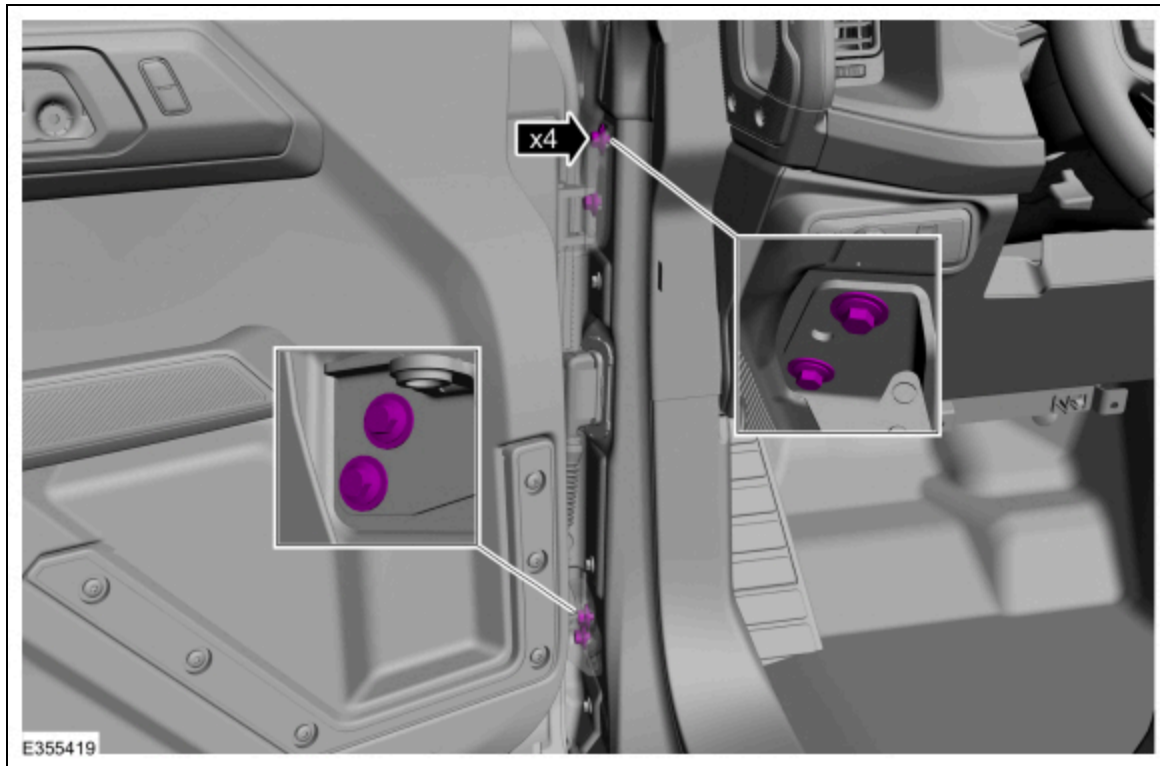

E355419

All alignments


- 11. Install the striker assembly.
Torque: 177 lb.in (20 Nm)

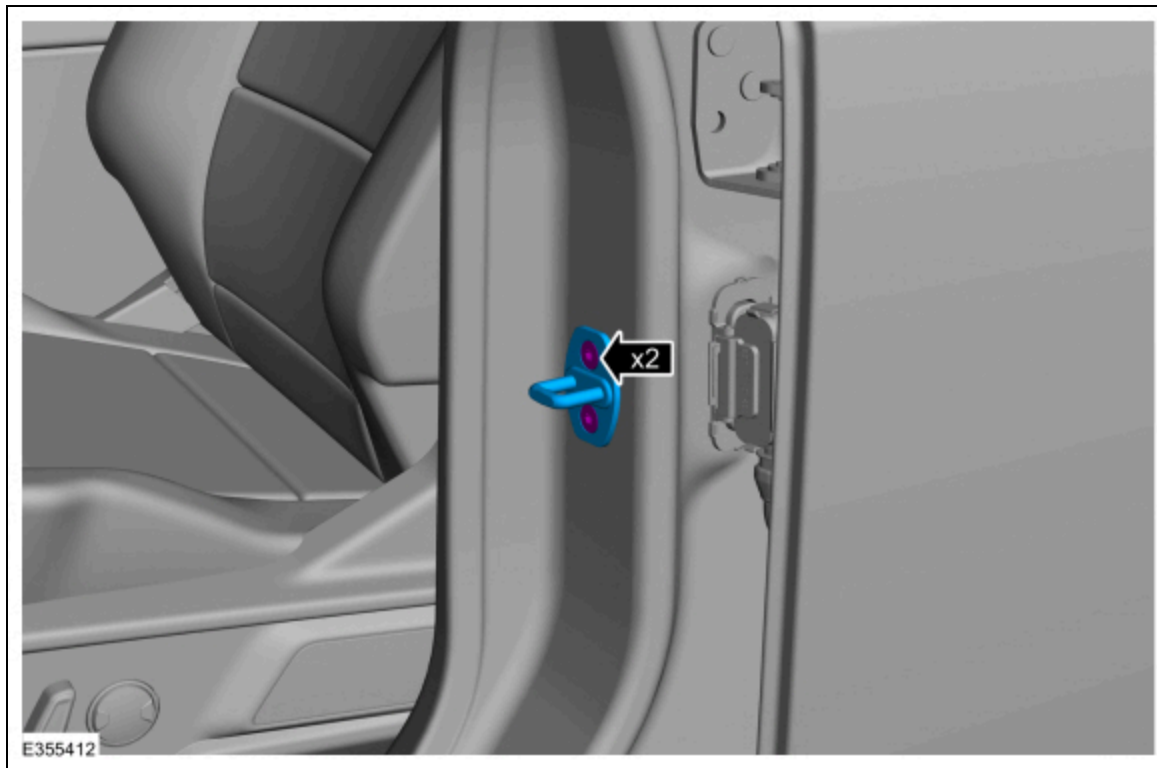

12. Loosen the bolts to permit movement of the striker assembly.

Loosen:

: 2 turn(s)

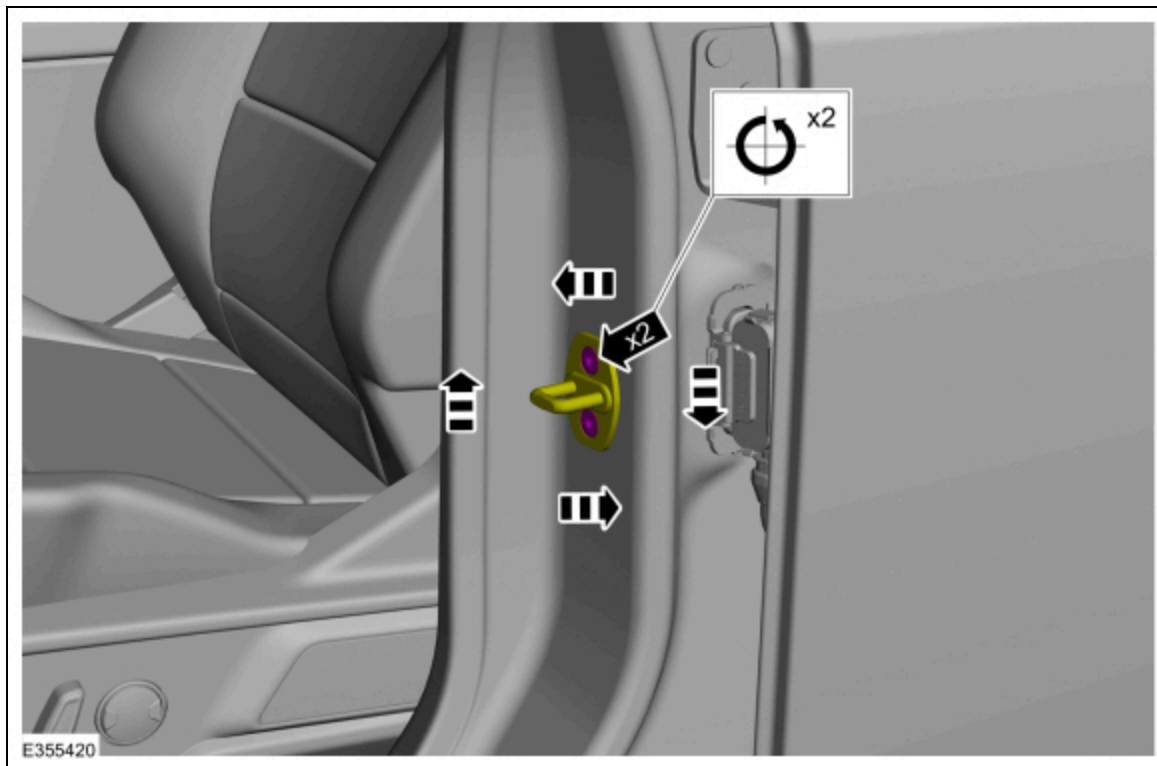


13. Tighten the bolts.

Torque: 177 lb.in (20 Nm)




14. **NOTE:** Make sure the striker is aligned in the center and does not contact top/bottom of latch fishmouth and that the door ajar light is off when closing the door.

Close the front door on striker by moving the door slowly to the first detent (secondary position) and then to primary closed position.

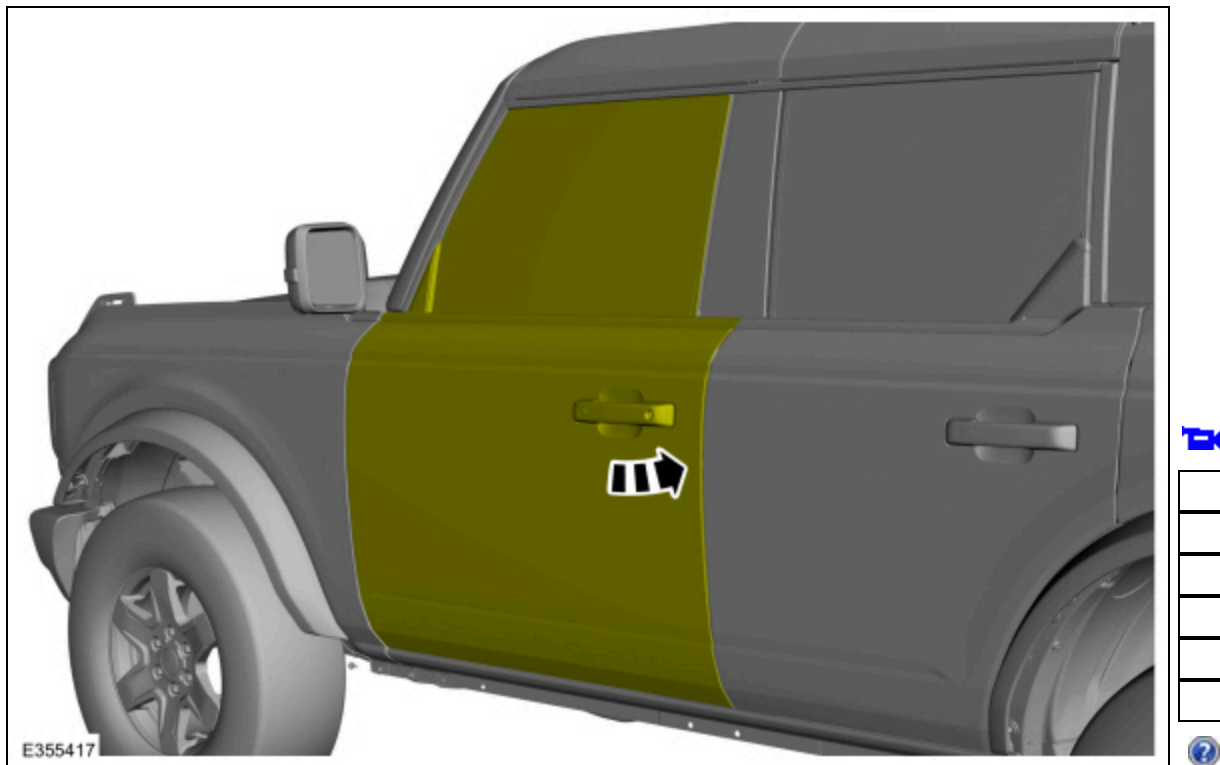

15. Inspect the body-to-front door dimensions.

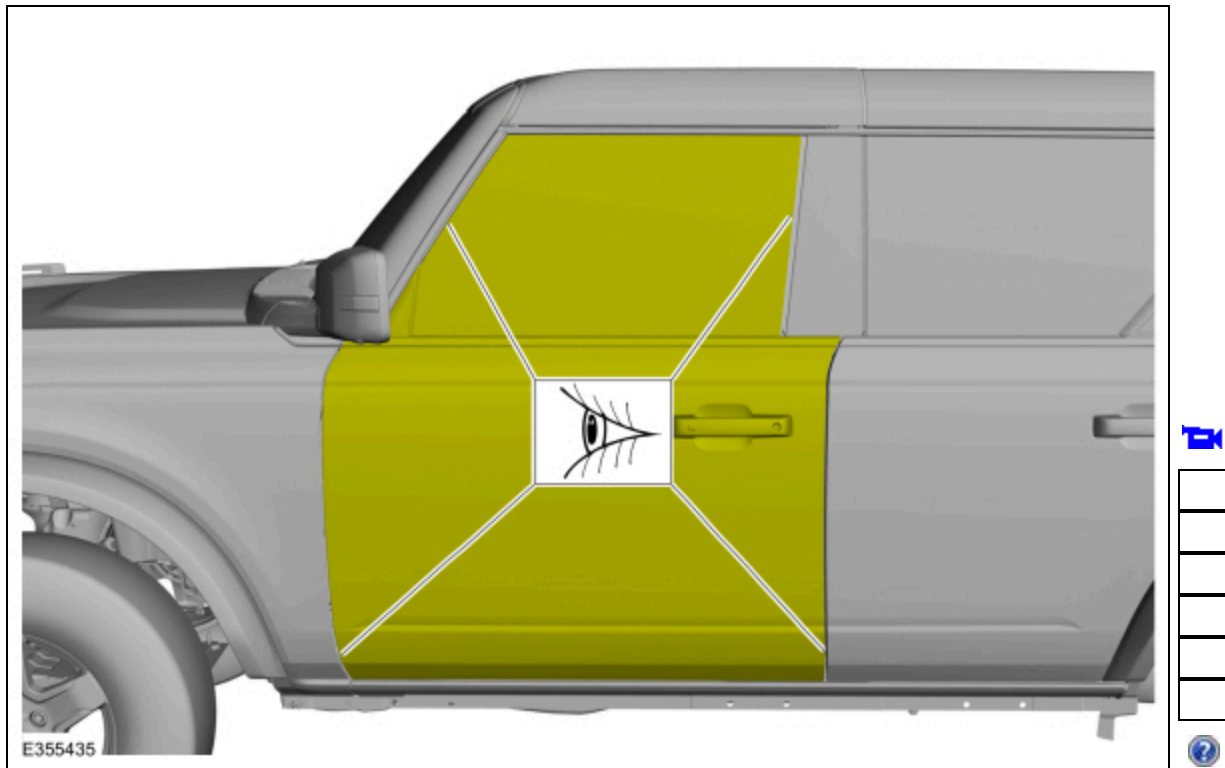

16. Check the front door window glass alignment.

Refer to: [Front Door Window Glass Adjustment](#) (501-11 Glass, Frames and Mechanisms, General Procedures).

© Copyright 2026, Ford Motor Company.