


Front Parking Aid Camera - Vehicles With: 360 Degree Camera




Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the radiator grille.
Refer to: [Radiator Grille](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Disconnect the electrical connector and the front camera washer nozzle hose.

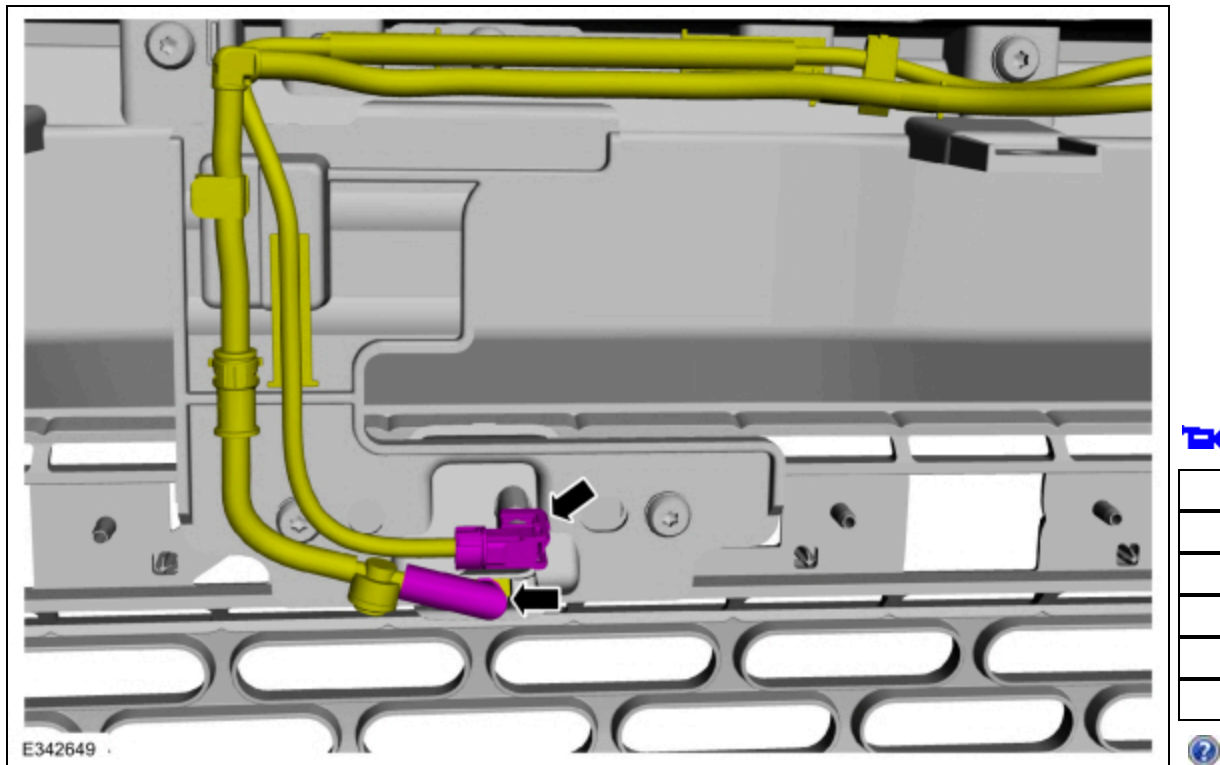


3. Separate the wiring and hose guides and position the wiring harness and the front camera washer nozzle hose aside.

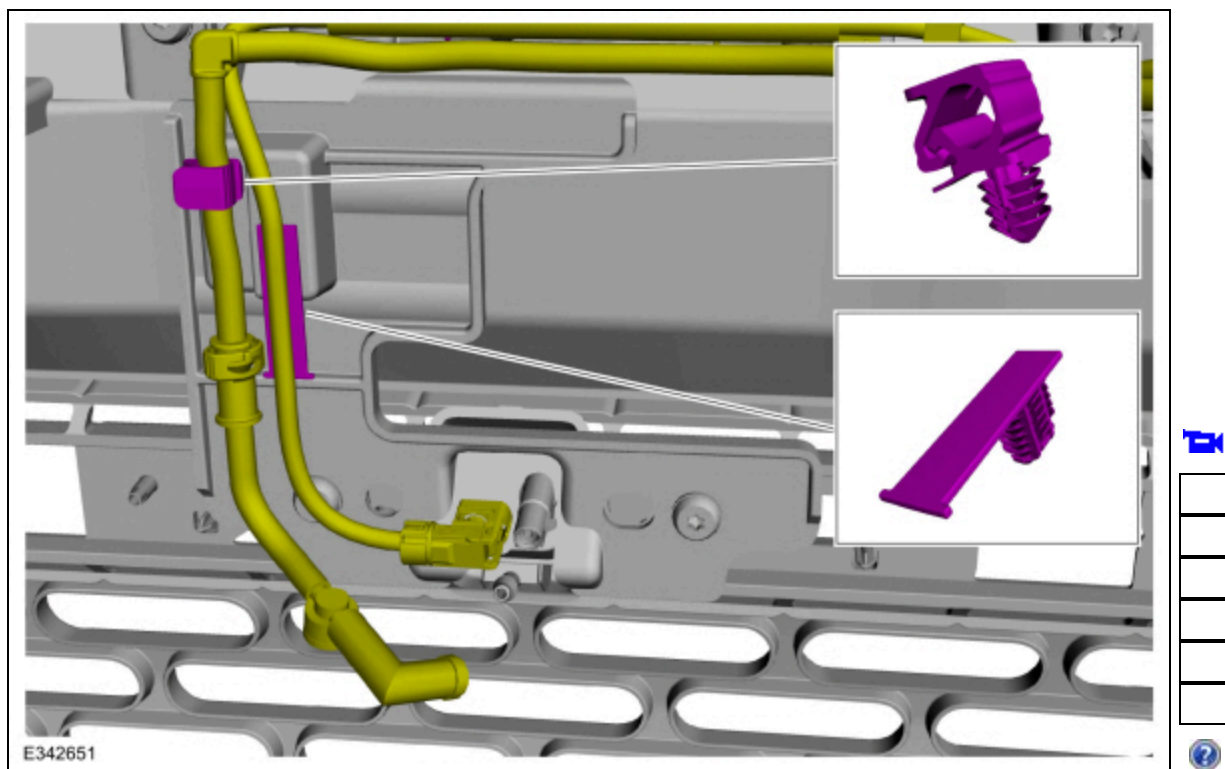


4. Remove the screws and the front parking aid bracket.

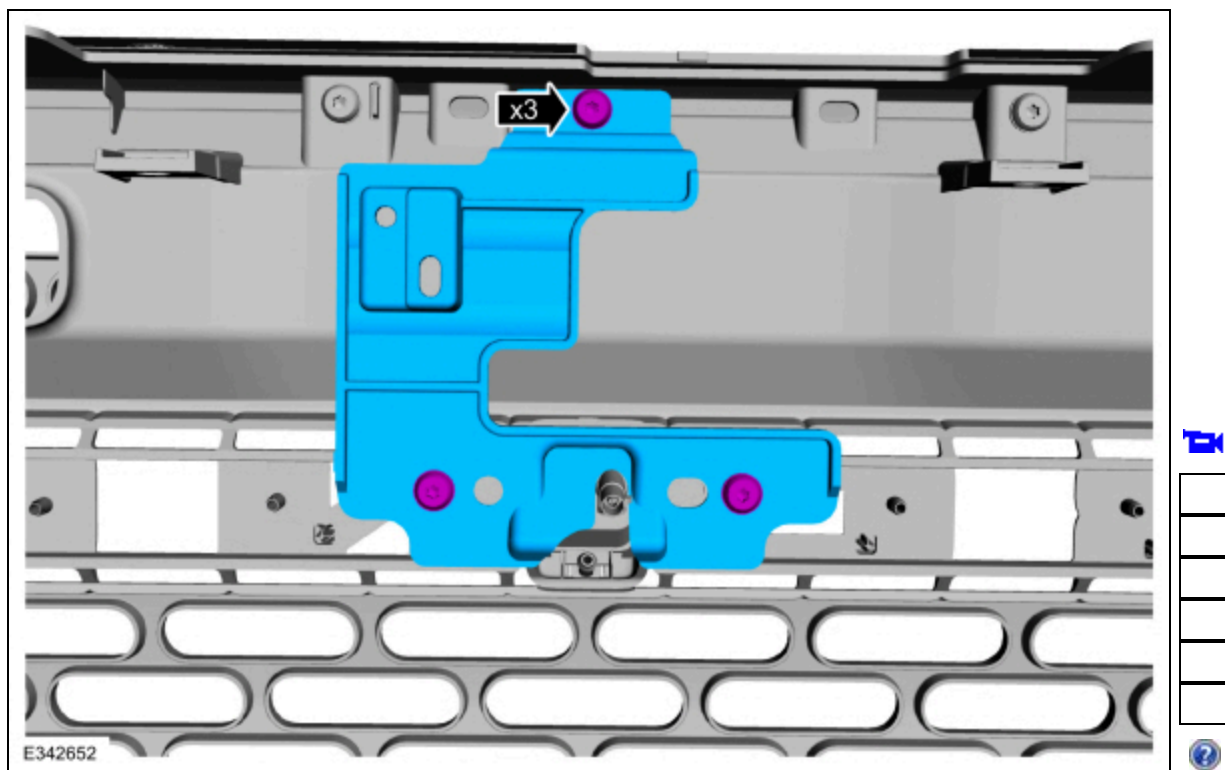

5. Remove the front parking aid camera and washer nozzle as an assembly.

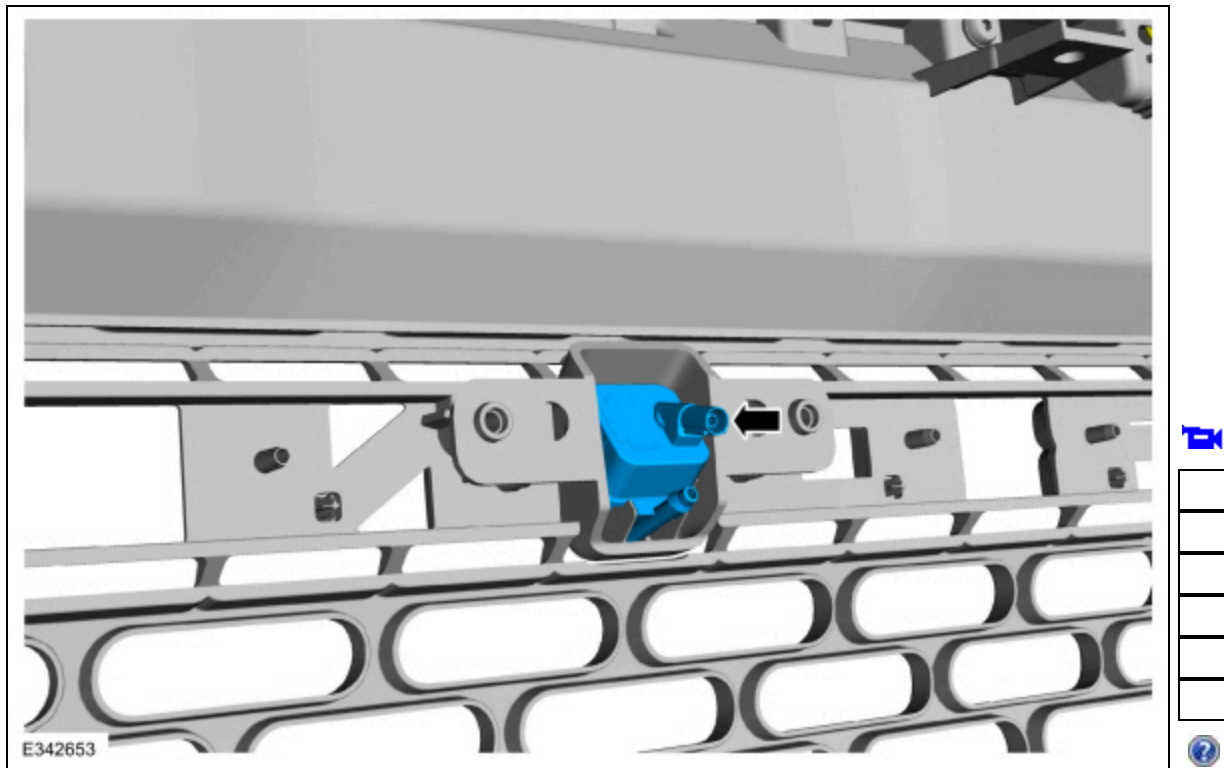

6. Release the tabs and remove the washer nozzle.

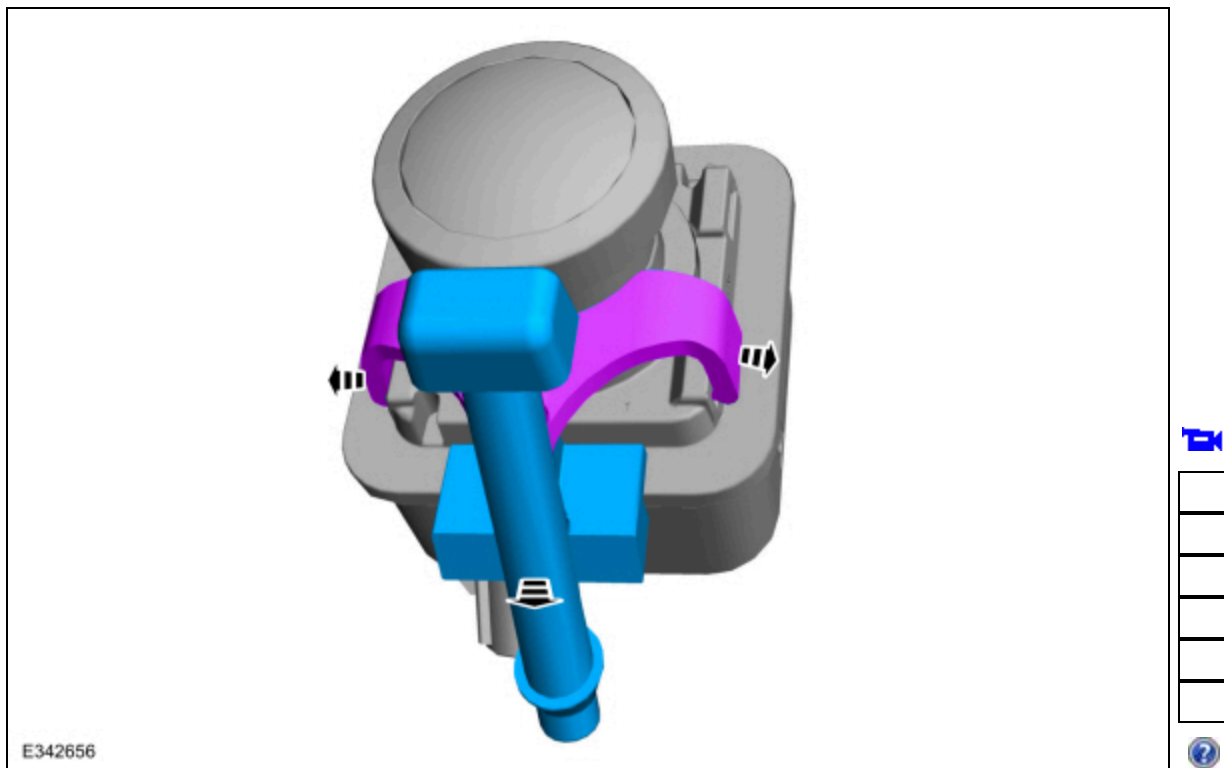

Installation

1. To install, reverse the removal procedure.

Vehicles equipped with analog cameras

2. Initialize the front view camera.

Refer to: [Parking Aid Camera Initialization - Vehicles With: Digital Rear View Camera/Parking Aid Camera \(413-13B\)](#)

Parking Aid - Vehicles With: 360 Degree Camera/Digital Rear View Camera/Parking Aid Camera, General Procedures).

Vehicles equipped with 360 degree cameras

3. Carry out the 360 degree camera alignment.

Refer to: [360 Degree View Camera Alignment - Vehicles With: 360 Degree Camera](#) (413-13B Parking Aid - Vehicles With: 360 Degree Camera/Digital Rear View Camera/Parking Aid Camera, General Procedures).

© Copyright 2025, Ford Motor Company.
