


Auxiliary Switches (If Equipped)

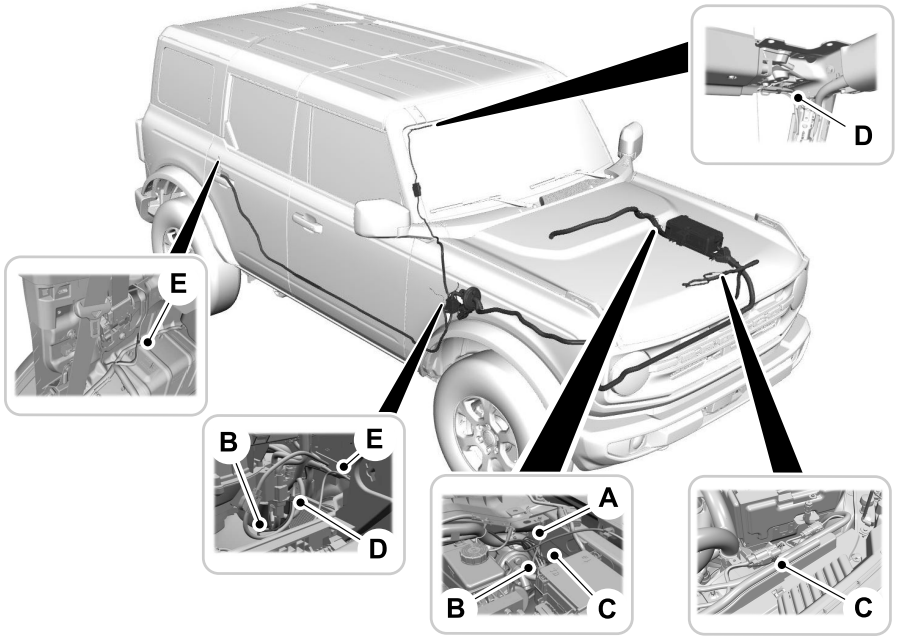

- A Circuits from under hood fuse box. See **Locating the Under Hood Fuse Box** (page 312).
- B Circuits to interior right-hand cowl side.
- C Circuit to front grille.
- D Circuit to right-hand visor.
- E Circuit to right-hand rear quarter panel.

Circuits from the under hood fuse box (A) are powered. All other circuits (B-E) are not connected at either end.

Additional information on fuse and relay locations is available. See **Fuses** (page 312). See your authorized dealer for service.