


Fender Splash Shield

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.


1. Remove the wheel and tire.
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the push pins and pin type retainers.

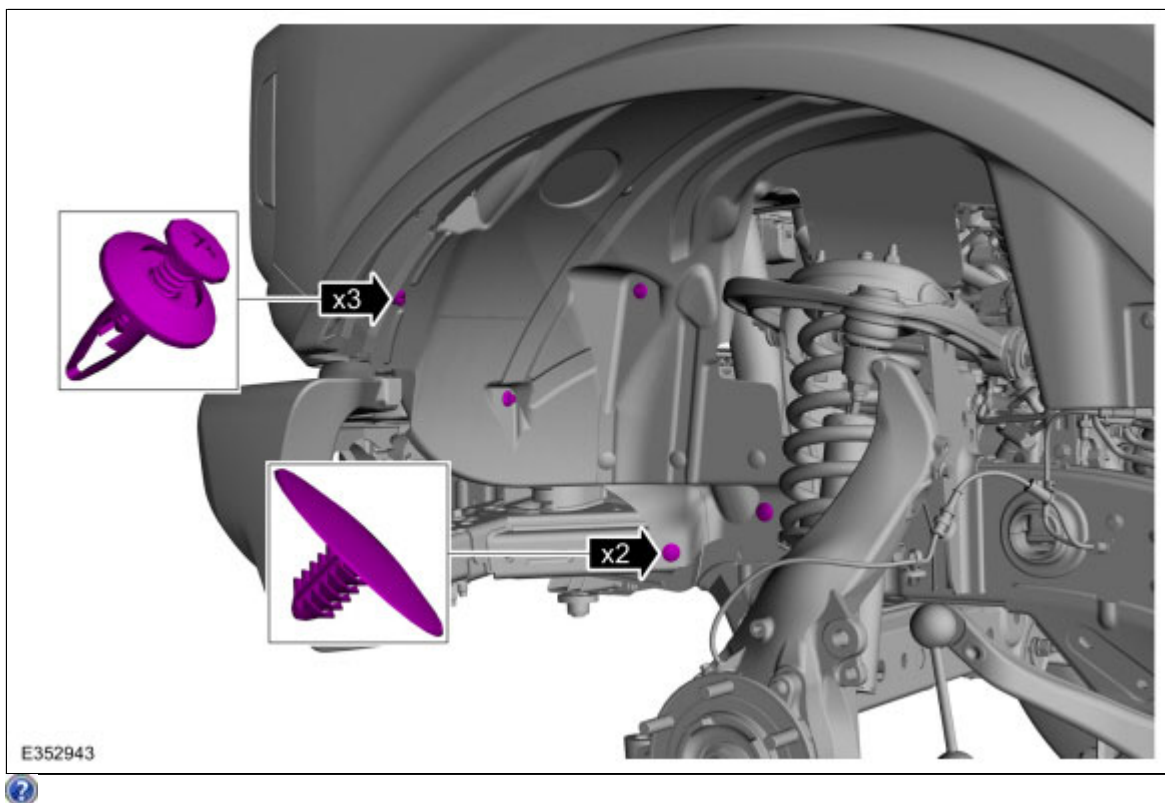


3. Remove the screws.
Torque : 15 lb.in (1.7 Nm)

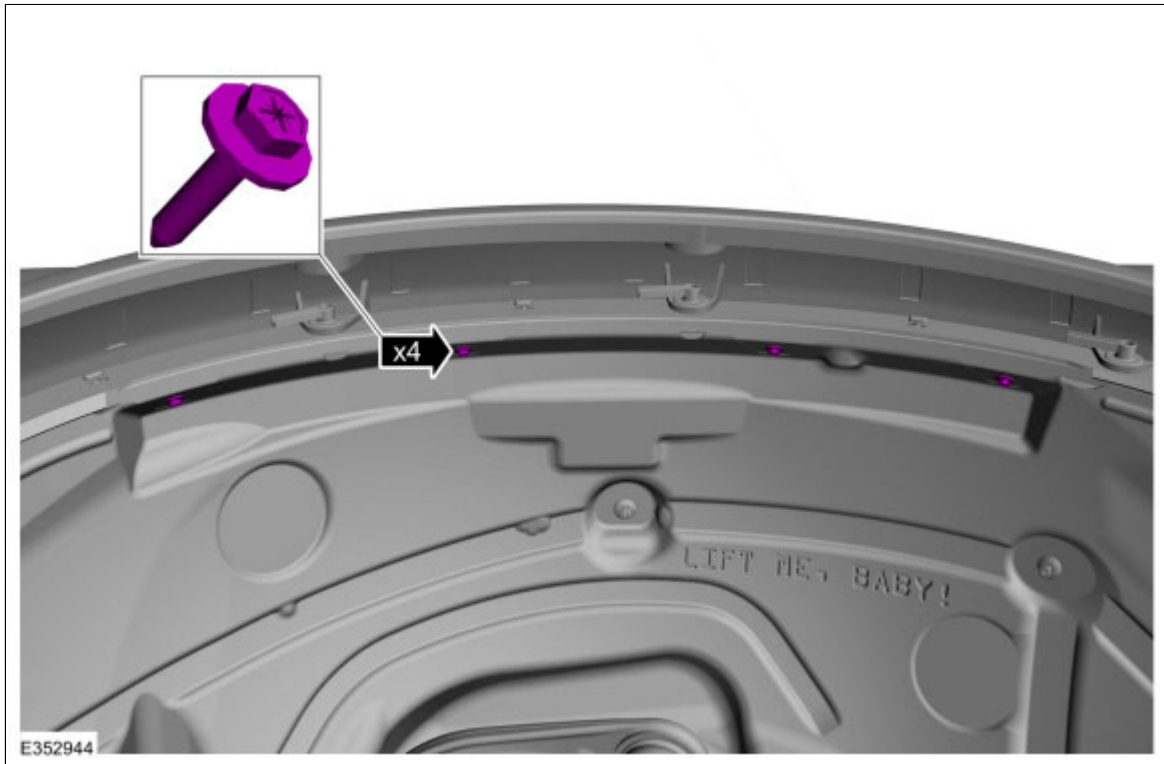

- 4. Remove the pin type retainers.

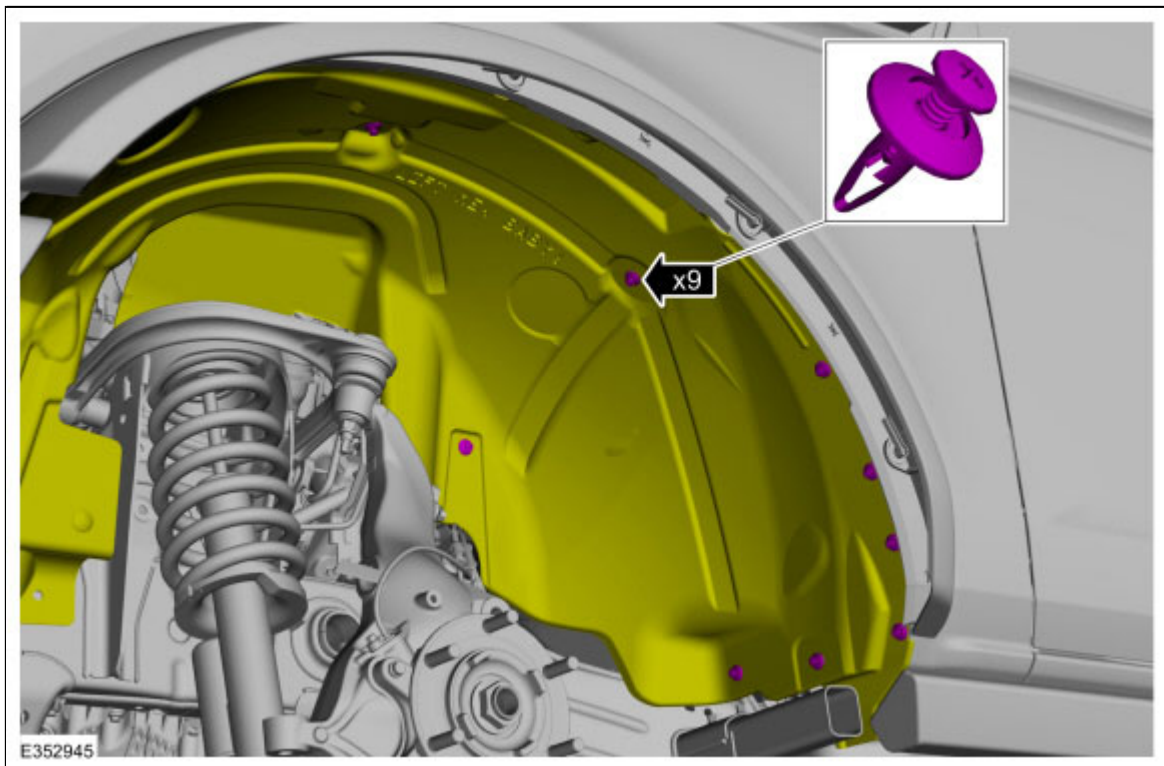

- 5. Remove the fender splash shield.

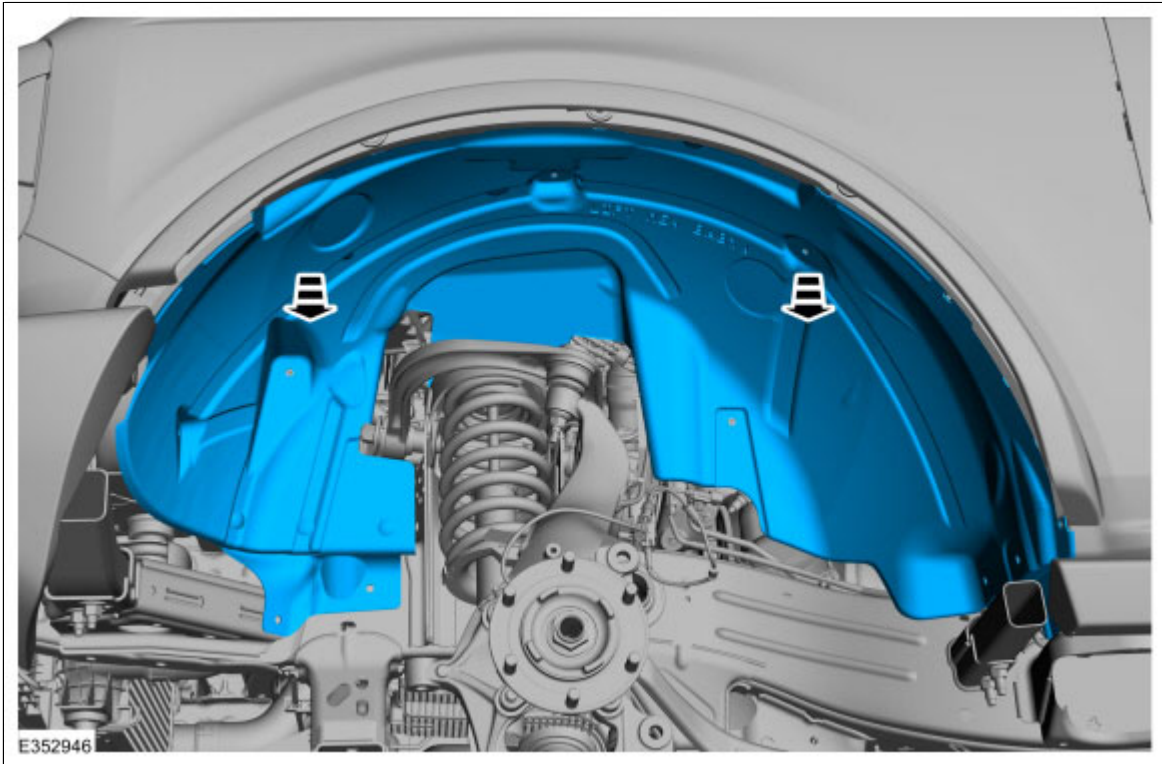

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company