


## Fender Splash Shield

### Removal


**NOTE:** Removal steps in this procedure may contain installation details.

**NOTE:** LH side shown, RH side similar.


1. Remove the wheel and tire.  
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the push pins and pin type retainers.

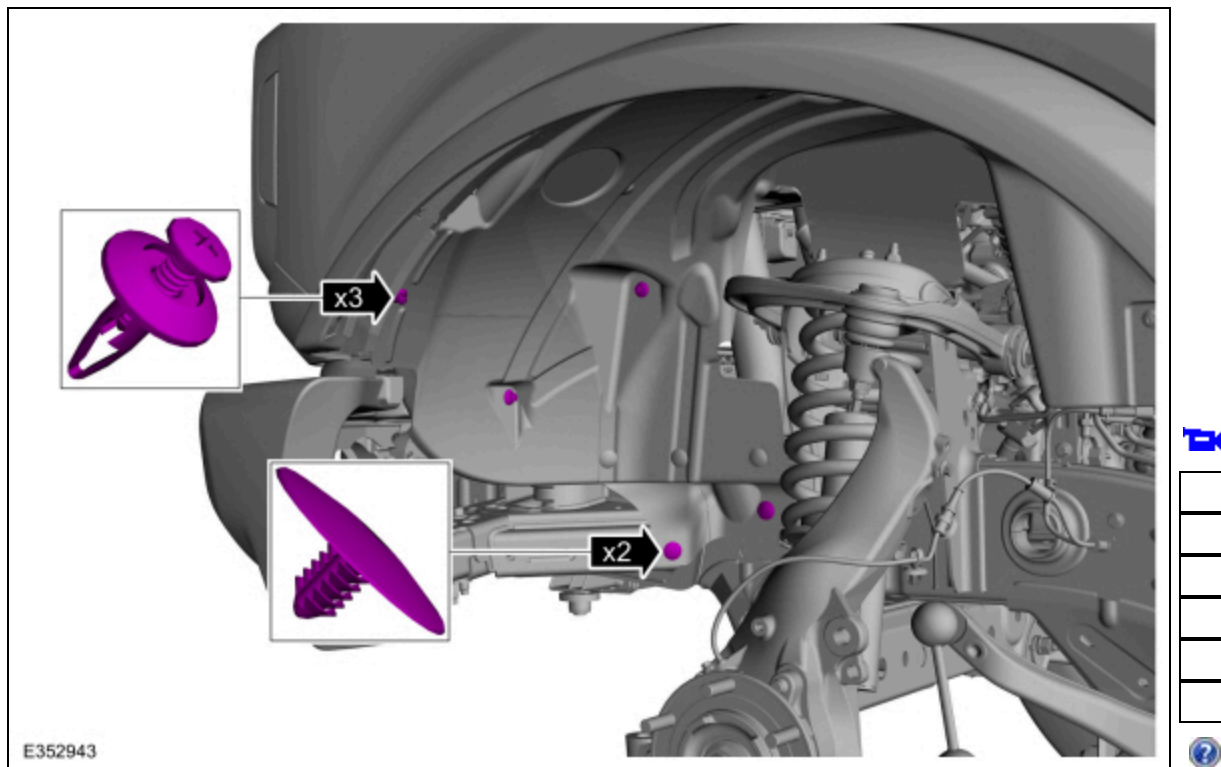


3. Remove the screws.  
*Torque: 15 lb.in (1.7 Nm)*

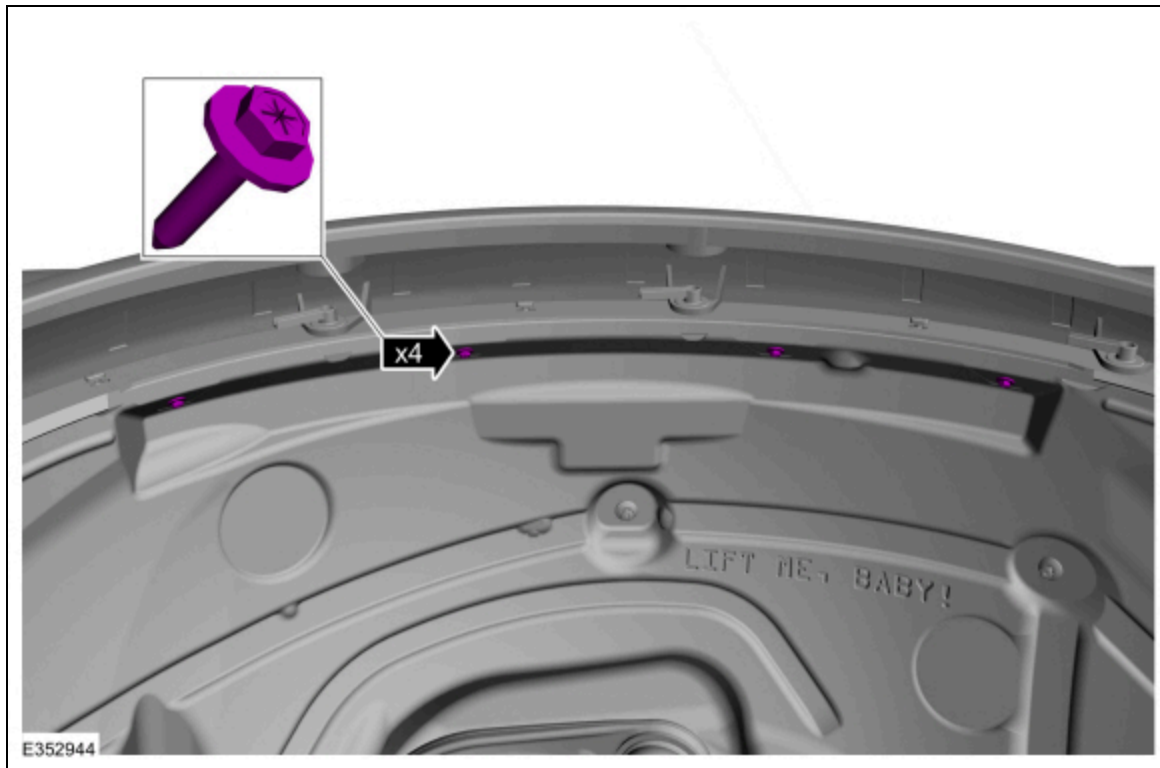

4. Remove the pin type retainers.

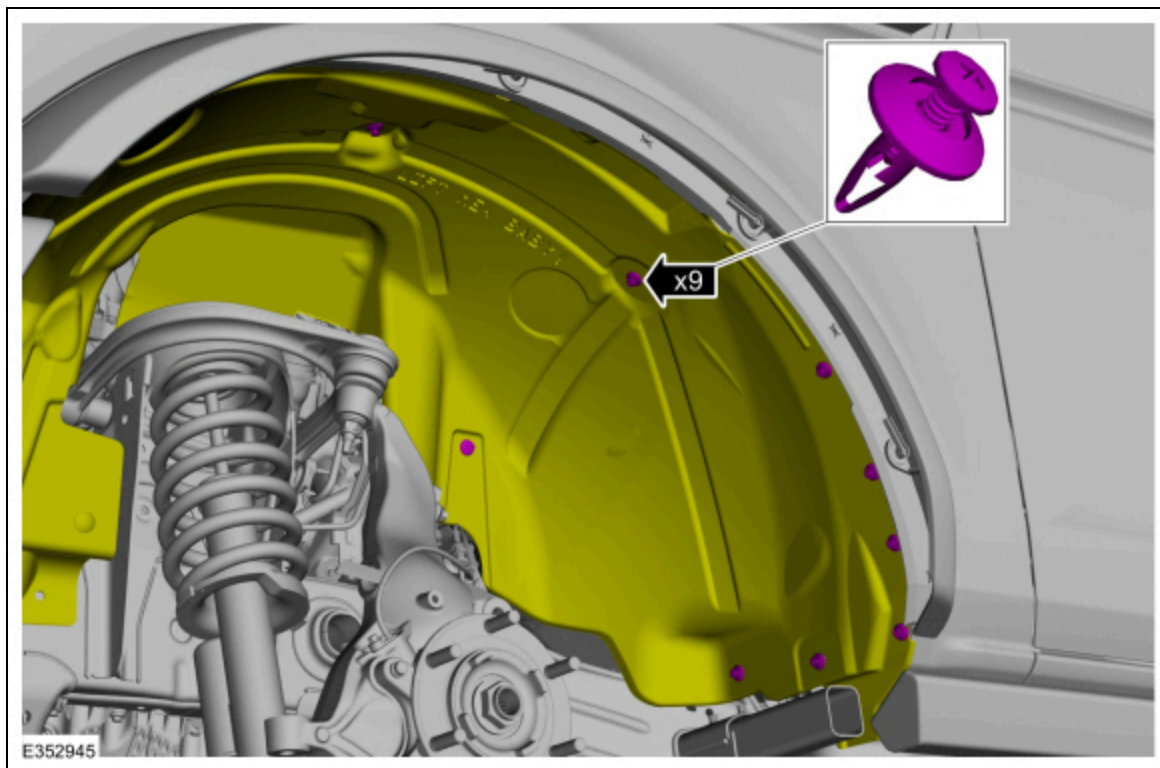

5. Remove the fender splash shield.

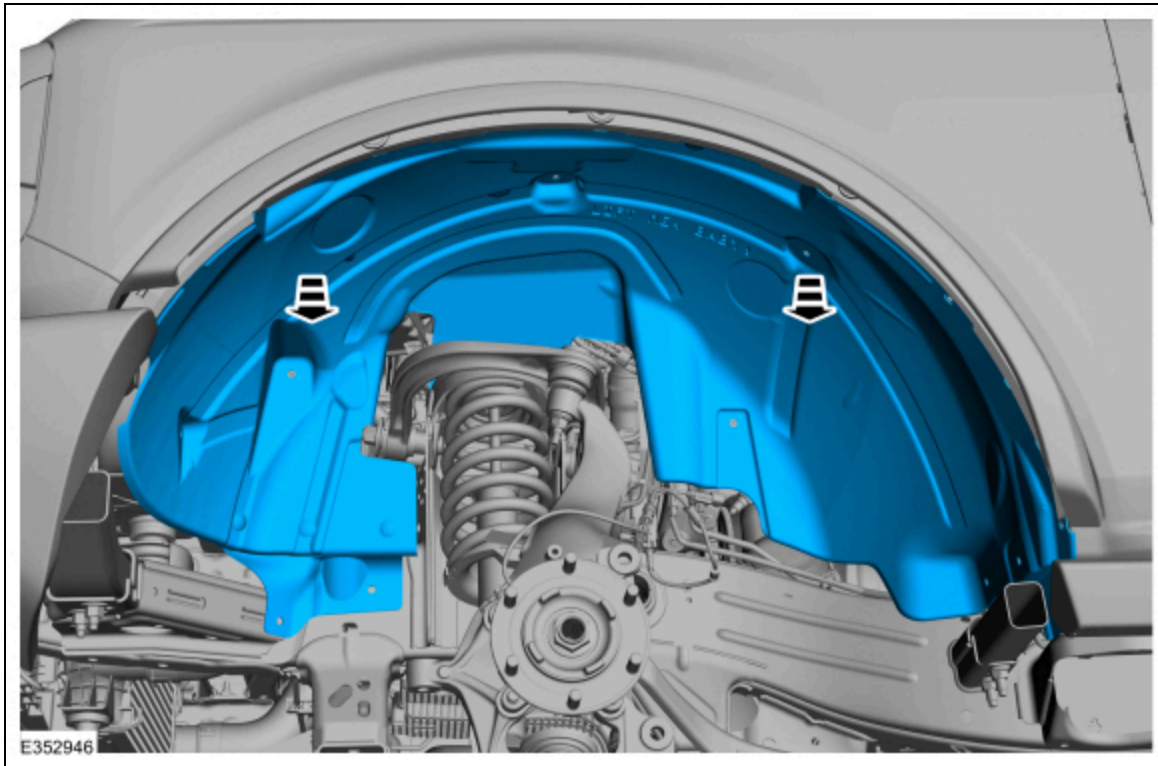

## Installation

1. To install, reverse the removal procedure.

© Copyright 2024, Ford Motor Company.