

Reset the Outside Air Temperature Sensor Learned Values

Configuration

1. **NOTE:** *The ambient air temperature sensor is a critical component for correct Air Conditioning (A/C) and Heating, Ventilation, and Air Conditioning (HVAC) system operation. Make sure after the reset is carried out the temperature is displaying correctly in the vehicle.*

NOTE: *The outside air temperature sensor is also referred to as the ambient air temperature sensor in this manual.*

Using the diagnostic FDRS scan tool, follow the on screen prompts to run and reset the outside air temperature sensor learned values.

Copyright © Ford Motor Company
