

BATTERY JUNCTION BOX (BJB)

Fuse	Position	Amps	Circuits protected
F36	82	40	Not used
F38	63	30	Heating, Ventilation and Air Conditioning (HVAC) control module
F42	64	30	Customer access (TBC)
F44	28	10	Brake Pedal Position (BPP) switch
F46	53	15	SYNC module [APIM]
F50	76	40	Heated rear window element
F54	84	40	All-Wheel Drive (AWD) module
F55	79	30	Trailer tow module, Trailer tow connector 7-pin
F58	55	20	Trailer tow connector 7-pin
F60	17	25	Upfitter switch #1 output
F61	74	15	Upfitter switch #2 output
F62	72	10	Upfitter switch #3 output
F63	68	5	Upfitter switch #4 output
F64	3	5	Upfitter switch #5 output
F65	2	5	Upfitter switch #6 output
F66	7	20	Sway bar disconnect module
F69	6	30	Windshield wiper motor
F71	72	30	Rear window wiper motor
F91	68	40	Trailer tow module
F100	3	20	Headlamp assembly LH
F101	2	20	Headlamp assembly RH
F107	7	30	Trailer tow module
F120	6	15	Fuel injectors (2.7L)
F124	4	5	Not used
F125	5	10	USB smart charger, USB charge port
F139	25	5	USB charge port overhead console
F140	44	5	Not used
F141	21	5	Not used
F146	67	5	Audio Digital Signal Processing (DSP) module
F158	5	10	Sway bar disconnect module
F160	25	15	Data Link Connector (DLC), Remote Data Link Connector (DLC)
F182	44	60	Driver Door Module (DDM)
F183	21	60	Passenger Door Module (PDM)
F202	67	60	Body Control Module (BCM)
F210	67	30	Body Control Module (BCM)