

The most time consuming part is removing the floor liner and tie down cleats.

Loadspace Trim Panel - 5-Door

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: *Removal steps in this procedure may contain installation details.*


1. Remove the rear scuff plate trim panel.
Refer to: Rear Scuff Plate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
1. Remove the load compartment floor covering mat.



1. Remove the load compartment floor covering tie down covers.

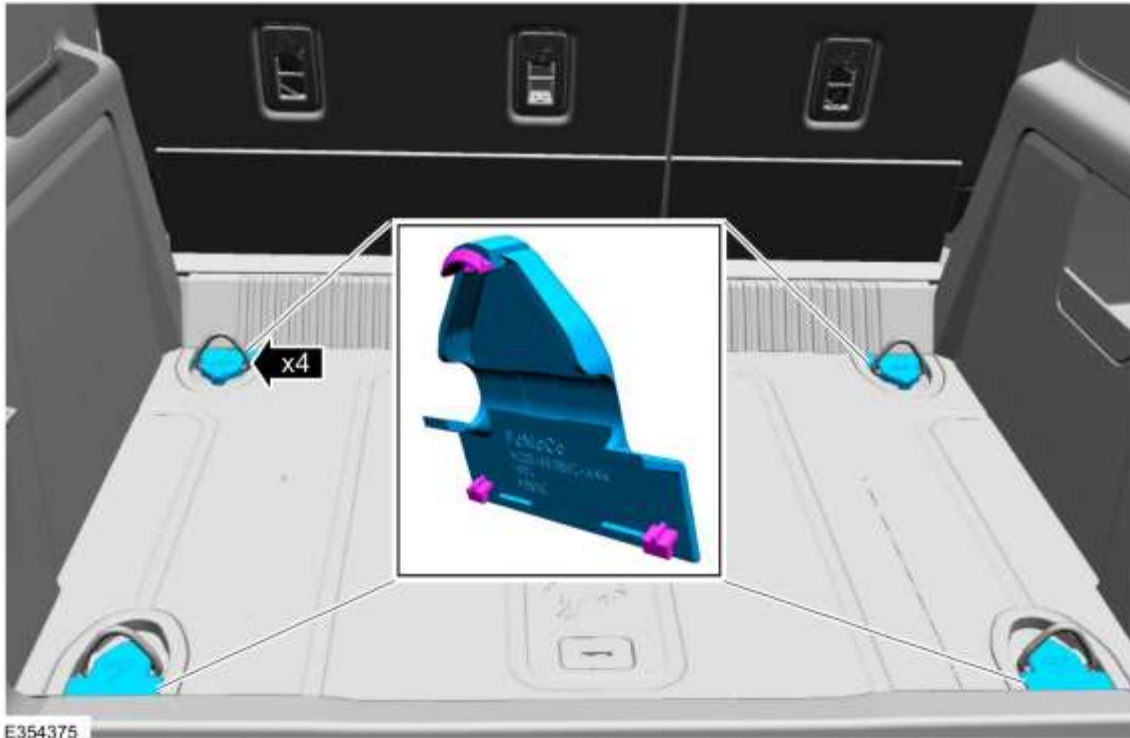


1. Remove the bolts and the load compartment floor covering tie downs.
Torque: 21 lb.ft (28 Nm)

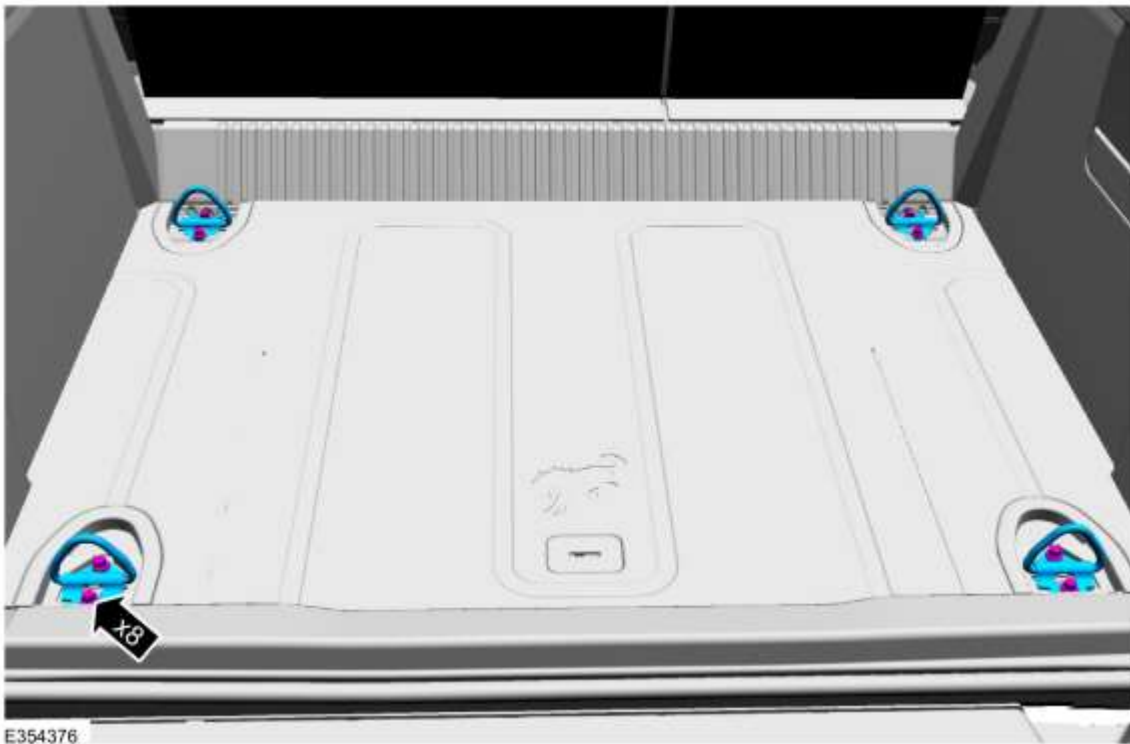


1. Remove the load compartment floor covering.



1. Release the clips and remove the loadspace scuff plate trim panel.
Use the General Equipment: Interior Trim Remover

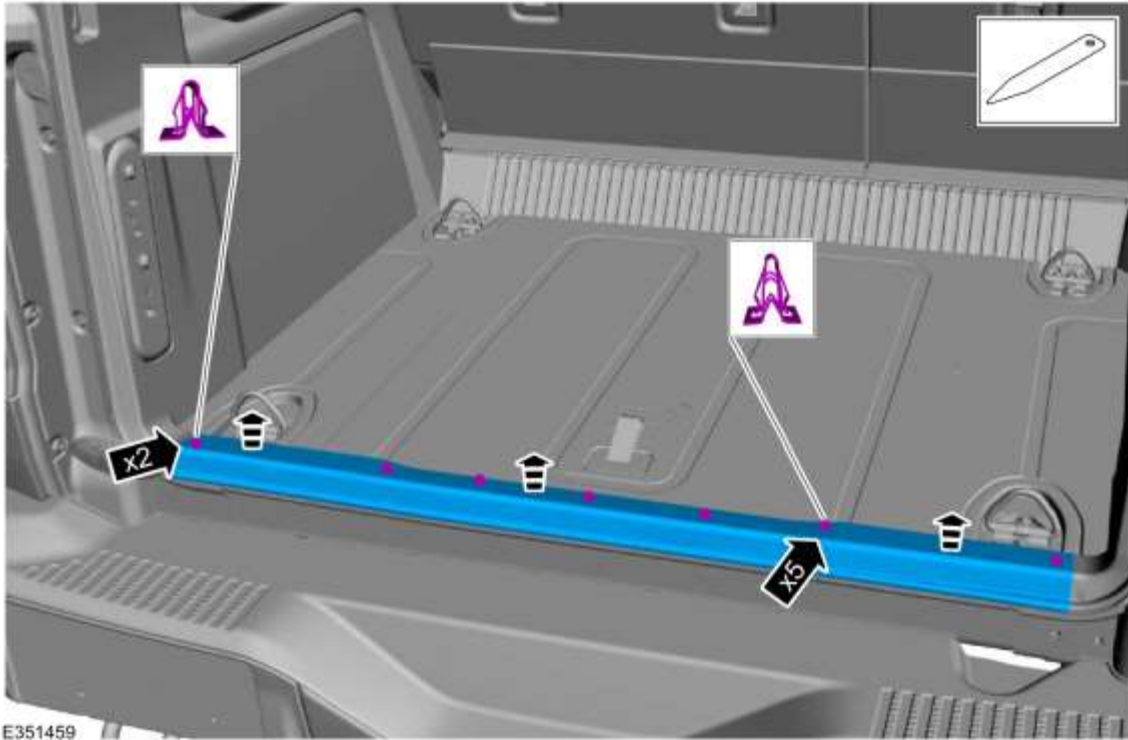


1. Remove the rear cargo trim cover and gap hider.

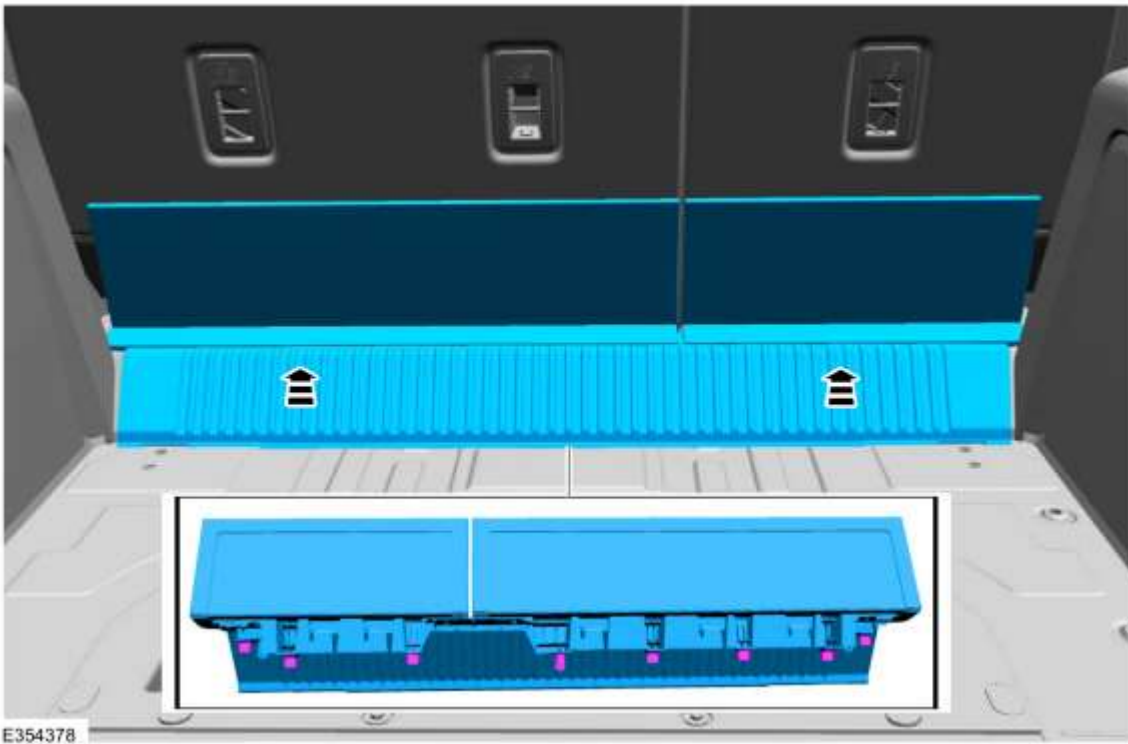


Left hand side

1. If equipped.
Remove the bolt and the convertible top bracket.
Torque: 133 lb.in (15 Nm)

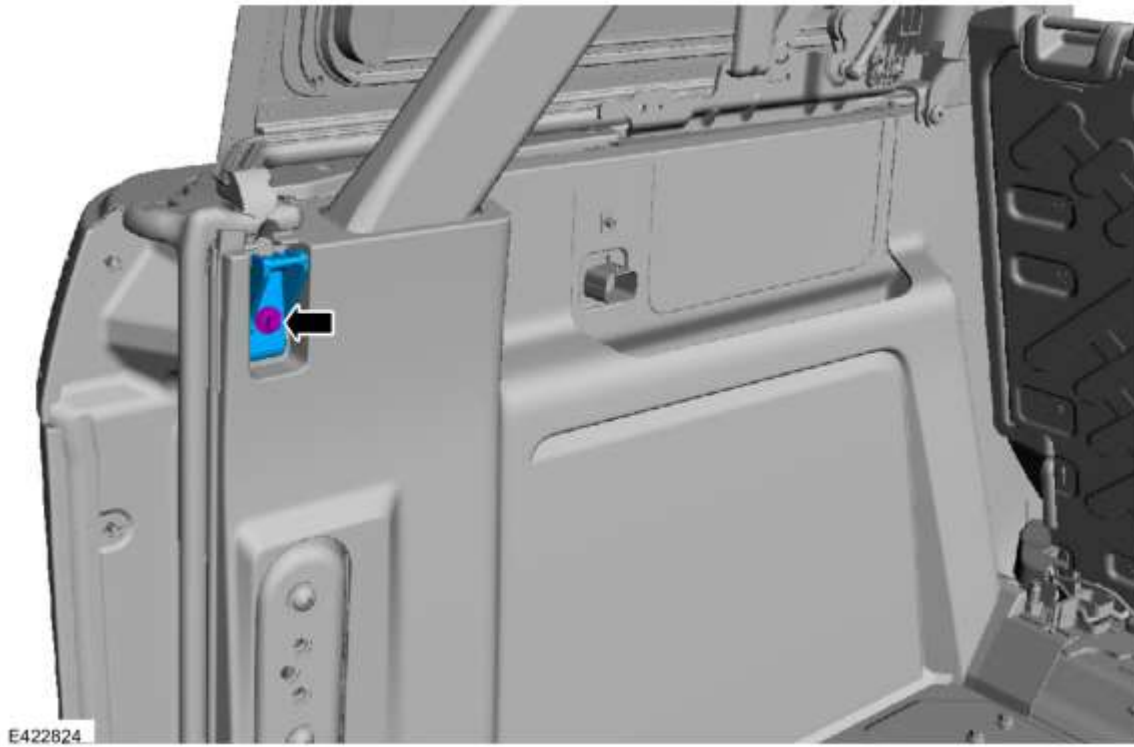


1. Release the tabs and remove the loadspace trim panel cover.
Use the General Equipment: Interior Trim Remover

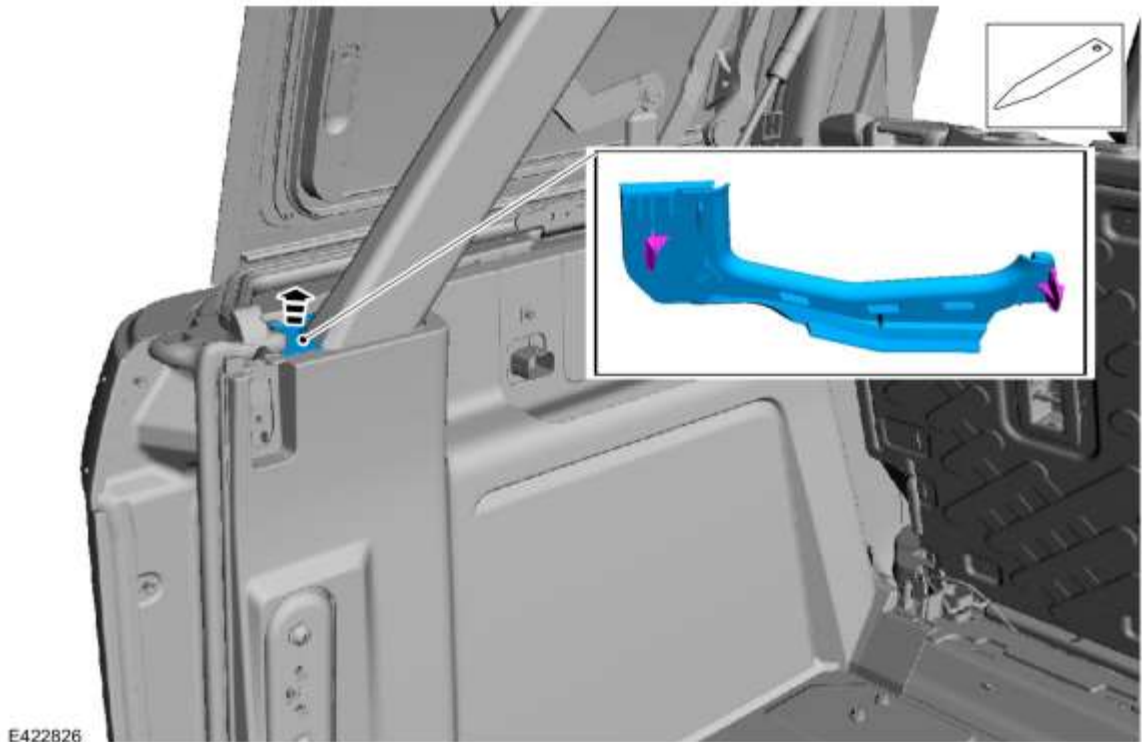


E422826

1. **NOTE:** *Seats removed for clarity.*
Remove the loadspace trim panel.
 1. Release the clips.
Use the General Equipment: Interior Trim Remover
2.
 1. Disconnect the PATS rear antenna electrical connector.

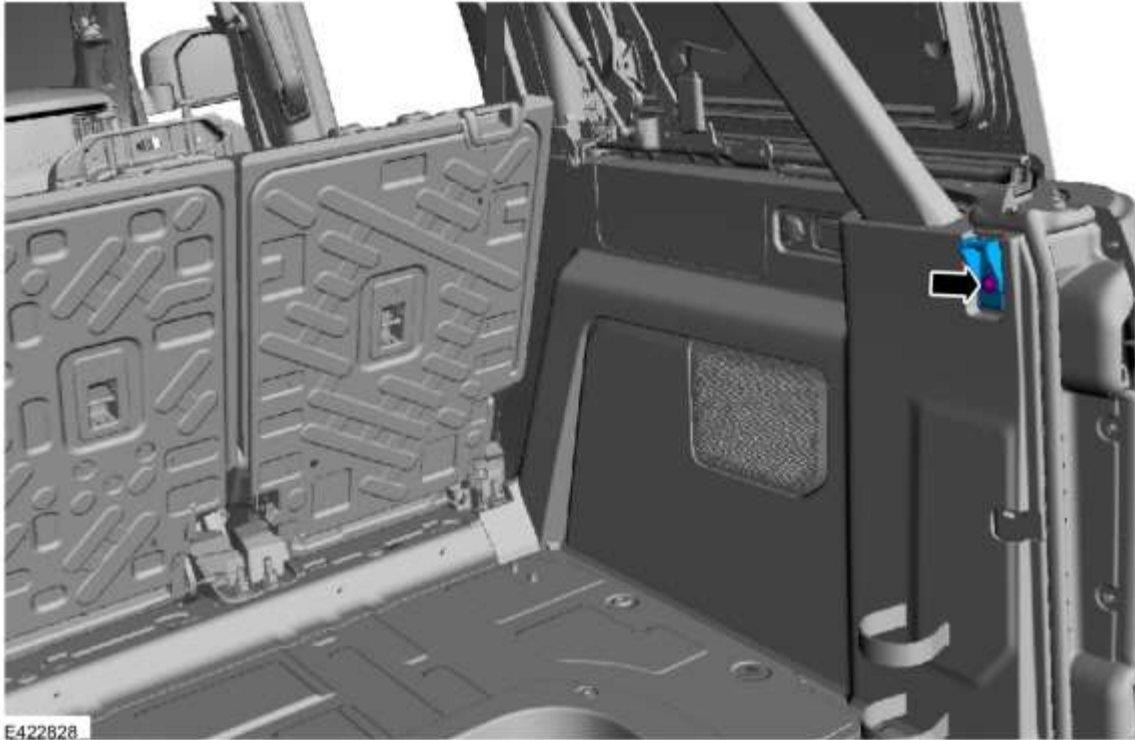

1. Release the tabs and remove the loadspace trim panel cover. Use the General Equipment: Interior Trim Remover

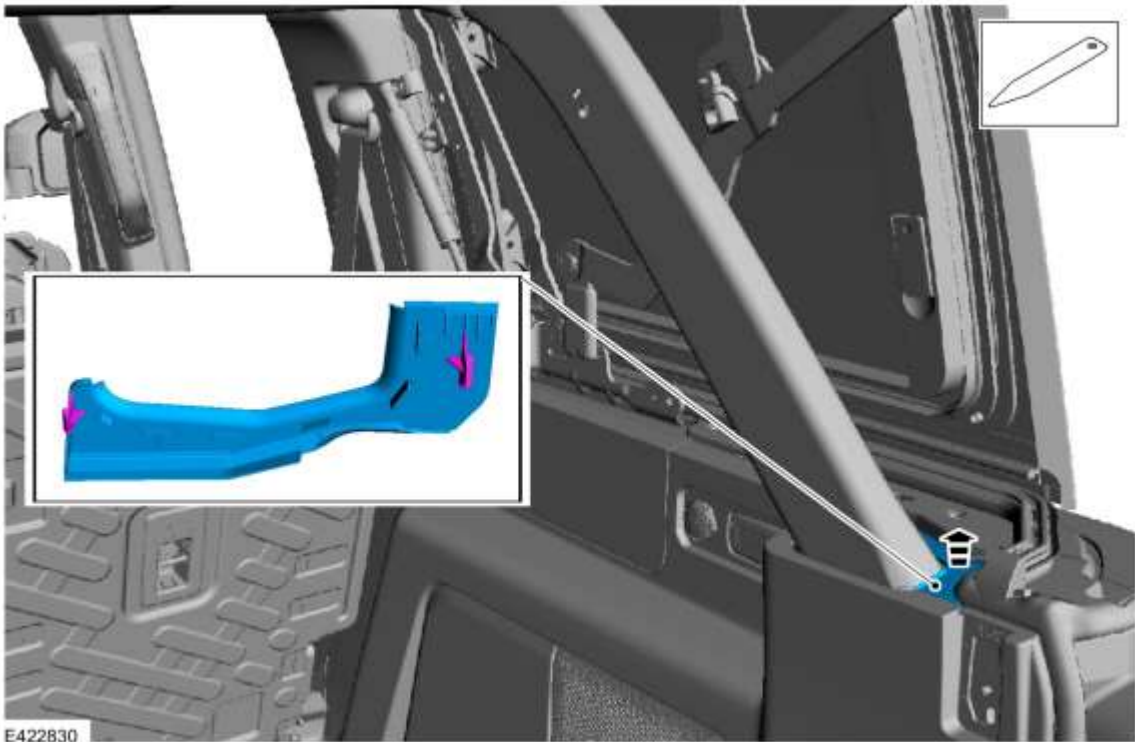

1. **NOTE:** *If installing a new loadspace trim panel, transfer parts as necessary.*
To install, reverse the removal procedure.