


SYNC Module [APIM]


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the information and entertainment display unit.
Refer to: [Center Display Screen](#) (415-00 Information and Entertainment System - General Information, Removal and Installation).
2. Disconnect the electrical connectors.

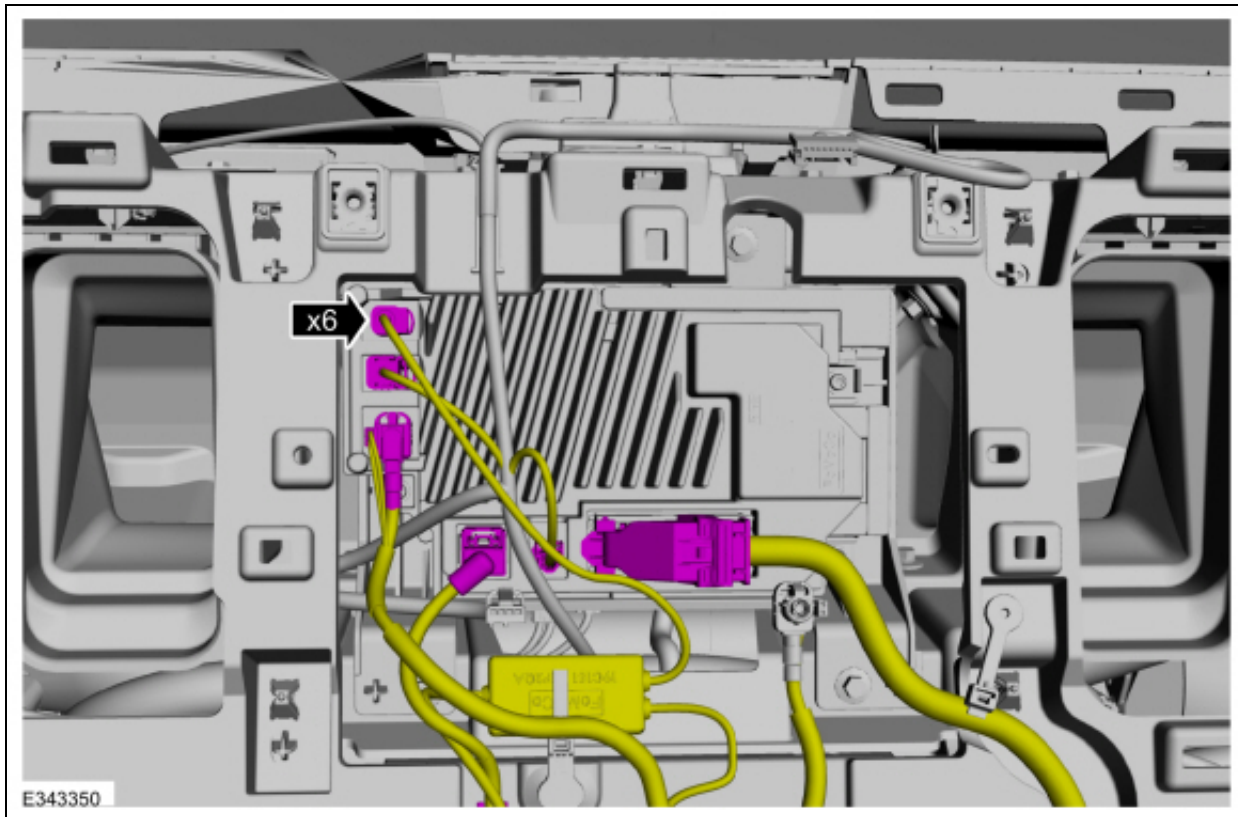

3. Remove the screws and the APIM.

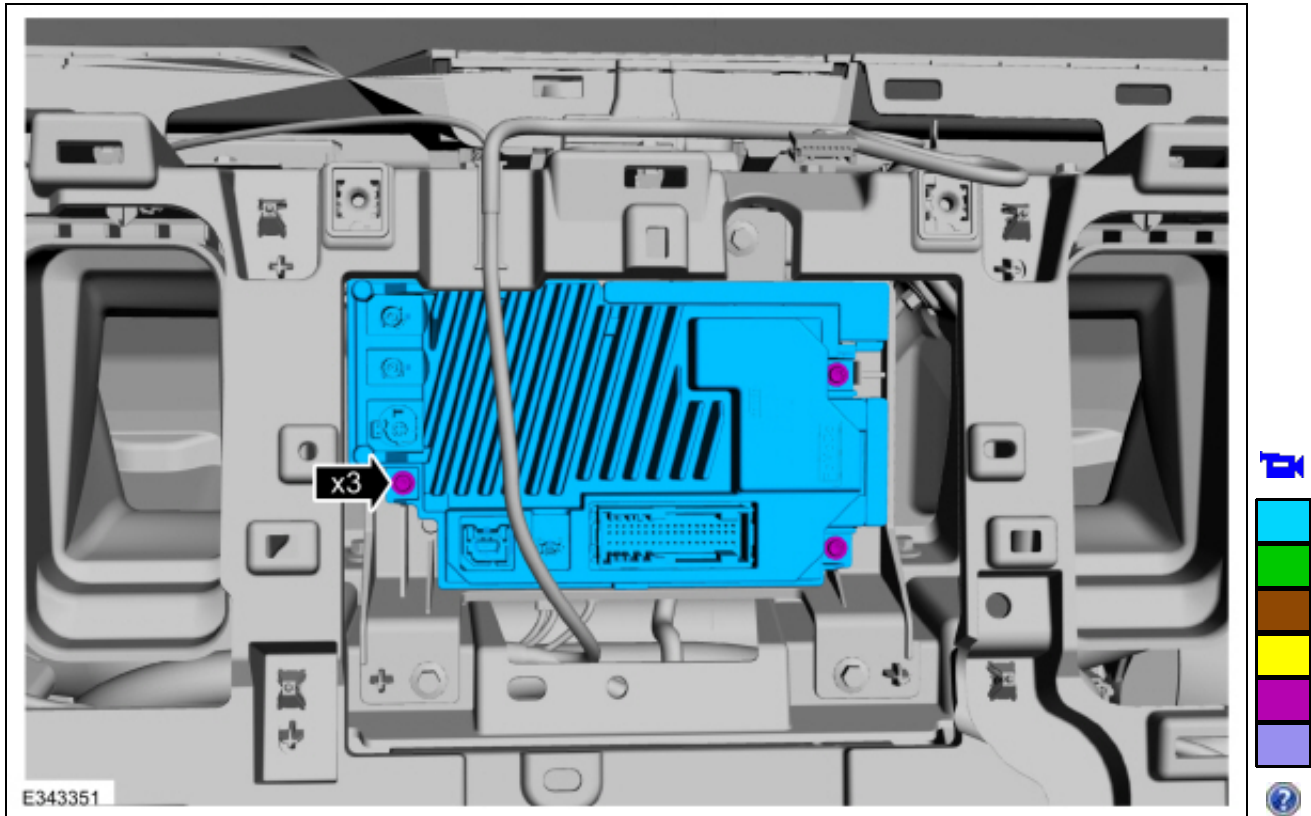

Installation

1. To install, reverse the removal procedure.
2. If a new APIM is being installed, program the APIM to the correct software level.
Refer to: [SYNC Module \[APIM\] Programming](#) (415-00 Information and Entertainment System - General Information, General Procedures).

© Copyright 2022, Ford Motor Company.