

Washer Hose Coupling

Disconnect


C-Lock Coupler

1. **NOTICE:** To prevent damage to the coupler, do not use hand tools to disconnect /connect the C-lock.

NOTE: Do not remove the lock ring from the C-lock coupler.


NOTE: Hold the female side of the coupler at the hose connection to prevent the coupler from rotating internally.

Gently twist the lock ring until it has rotated approximately 90 degrees.

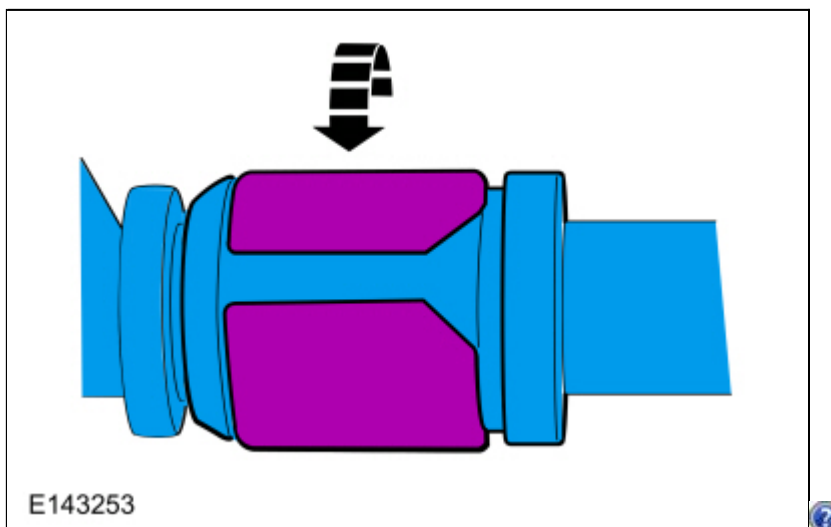


2. **NOTICE:** The female side of the C-lock coupler contains an O-ring seal. Use care not to lose the O-ring.

Slide the C-lock coupler apart from the component fitting.

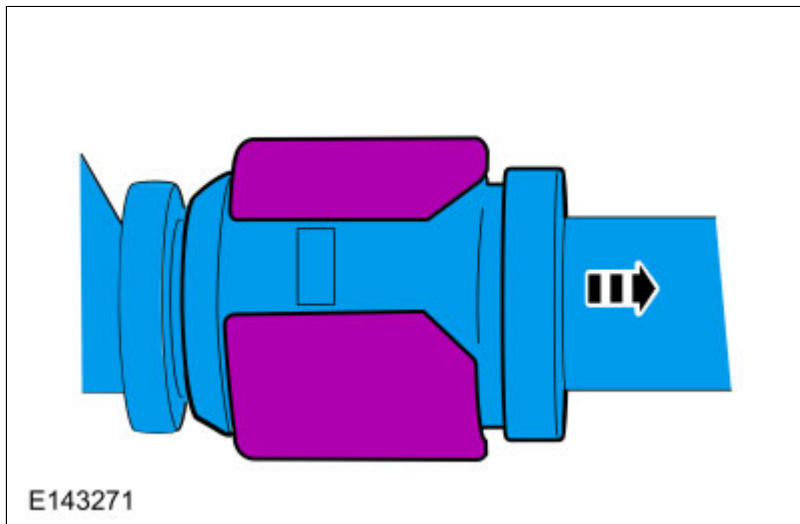

3. **NOTICE:** Do not leave the lock ring in the unlocked position. This will weaken the lock ring and prevent it from correctly locking in place when reassembled, resulting in a leak.

Rotate the lock ring back to the original locked position.

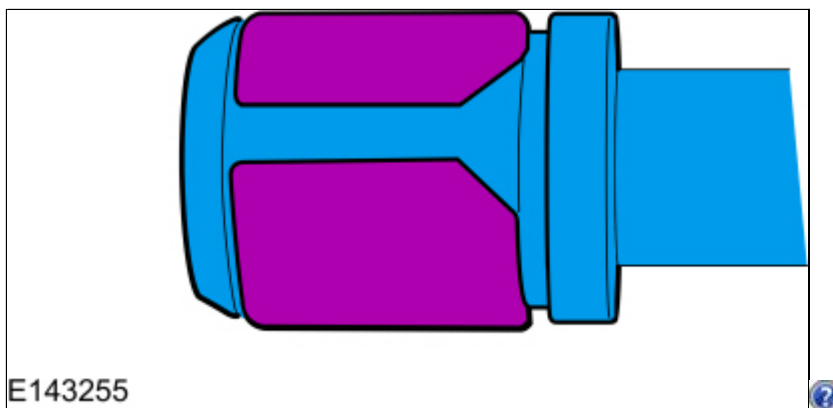

4. To connect, verify the C-lock coupler lock ring is in the locked position.
5. **NOTE:** *The lock ring flexes open slightly to allow the male fitting to enter the C-lock coupler.*

NOTE: *The lock ring can be heard as it snaps into the lock position.*


Insert the male fitting into the C-lock coupler.

6. Gently pull on the C-lock coupler to verify it is seated correctly.


Pinch Type Coupler

7. **NOTICE:** To prevent damage to the coupler, do not use hand tools to disconnect /connect pinch type coupler.

Squeeze the coupler at the two raised points and gently pull the connection apart.

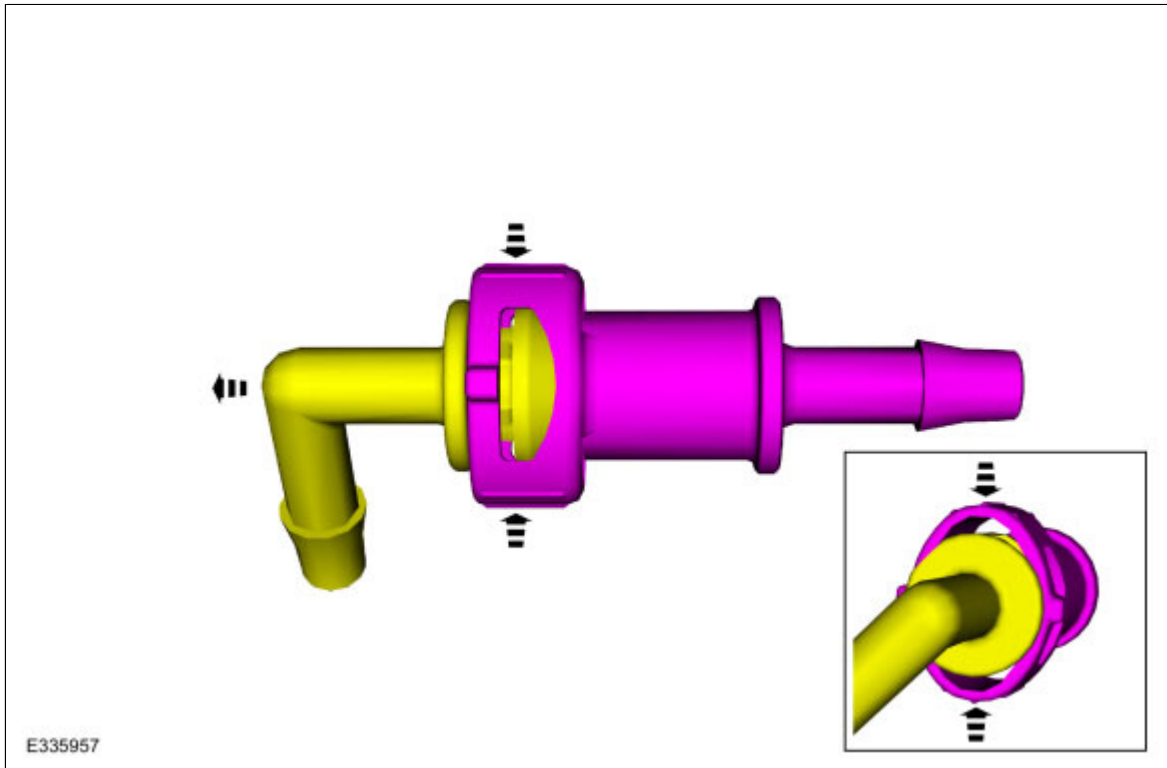


8. Inspect tie O-ring. Replace if necessary.

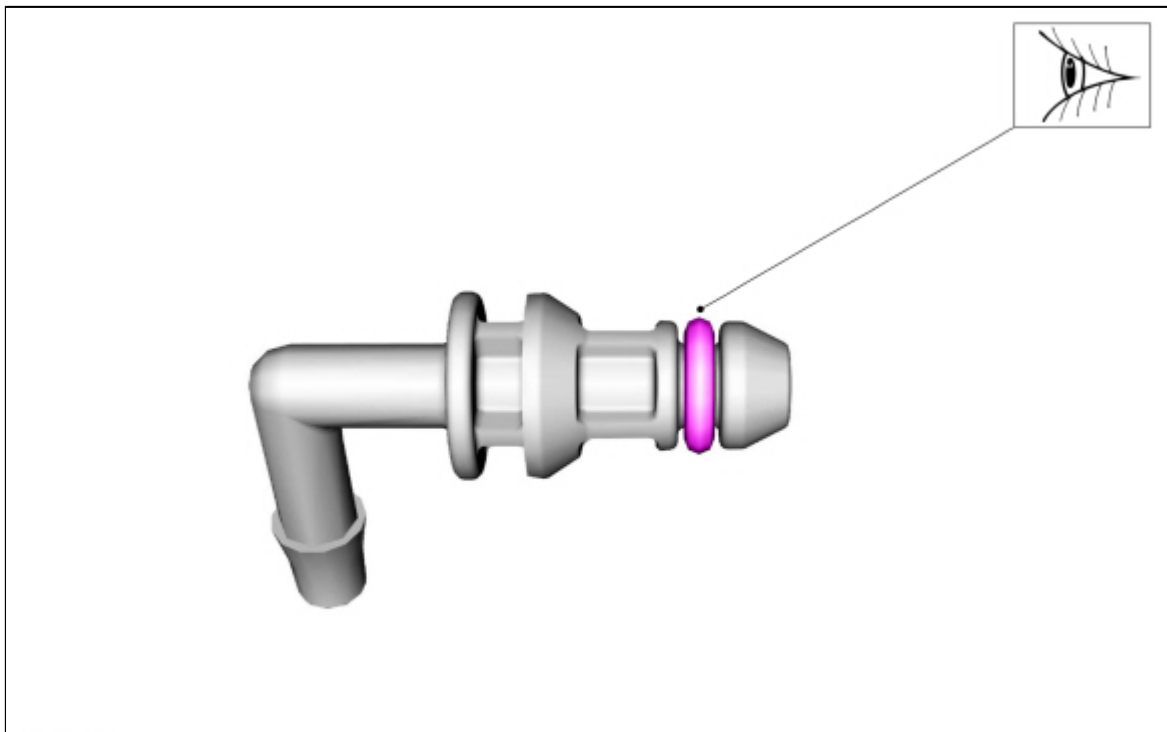

9. **NOTE:** An audible click should be heard once in the locked position.

To connect, insert the male fitting into the pinch type coupler until it is in the locked position.

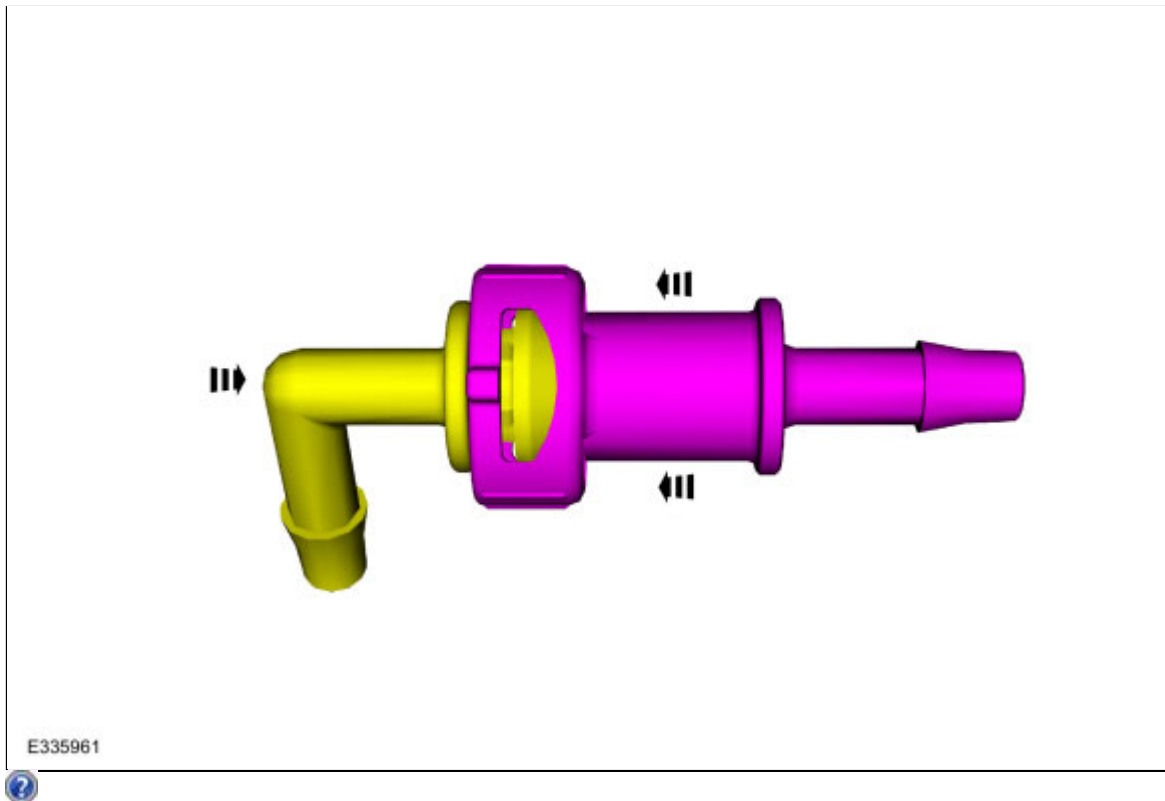

10. Gently pull on the pinch type coupler to verify it is seated correctly.

Copyright © Ford Motor Company