


Windshield Wiper Pivot Arm


Removal

NOTE: Left hand (LH) shown, right hand (RH) similar.

1. Remove the windshield wiper pivot arm nut cover.

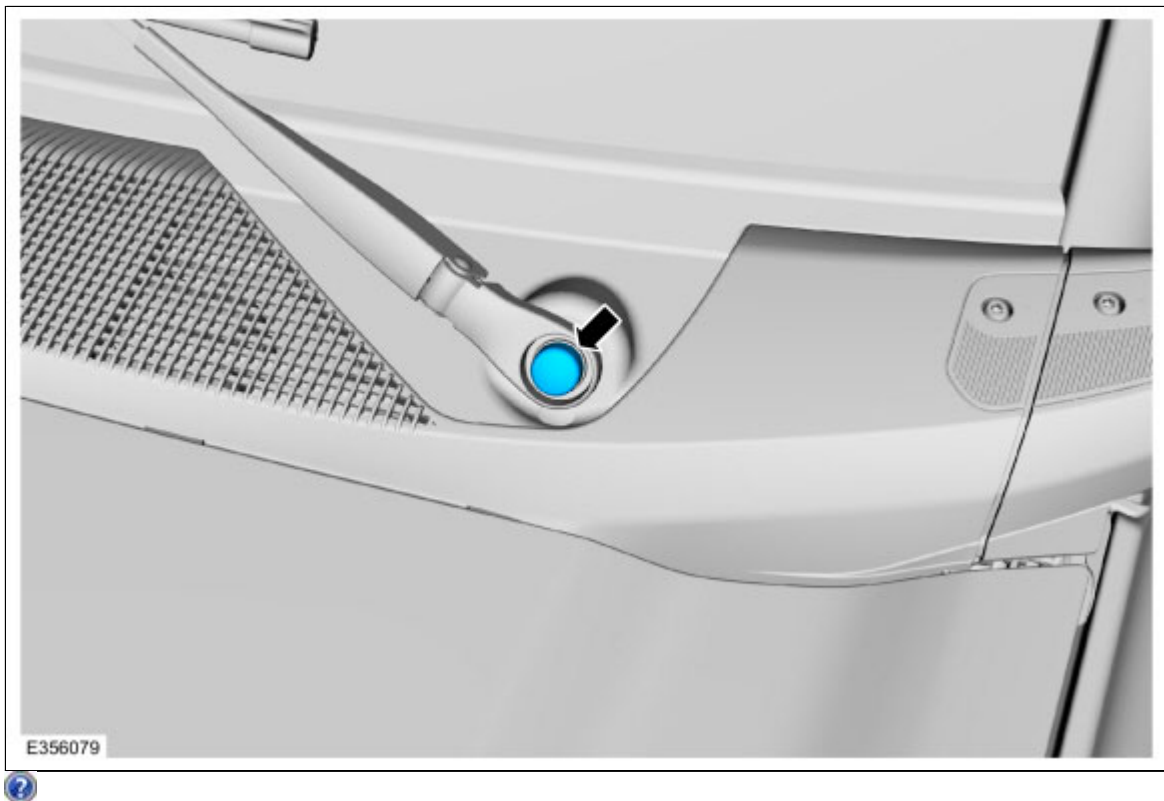


2. Remove the windshield wiper pivot arm nut.

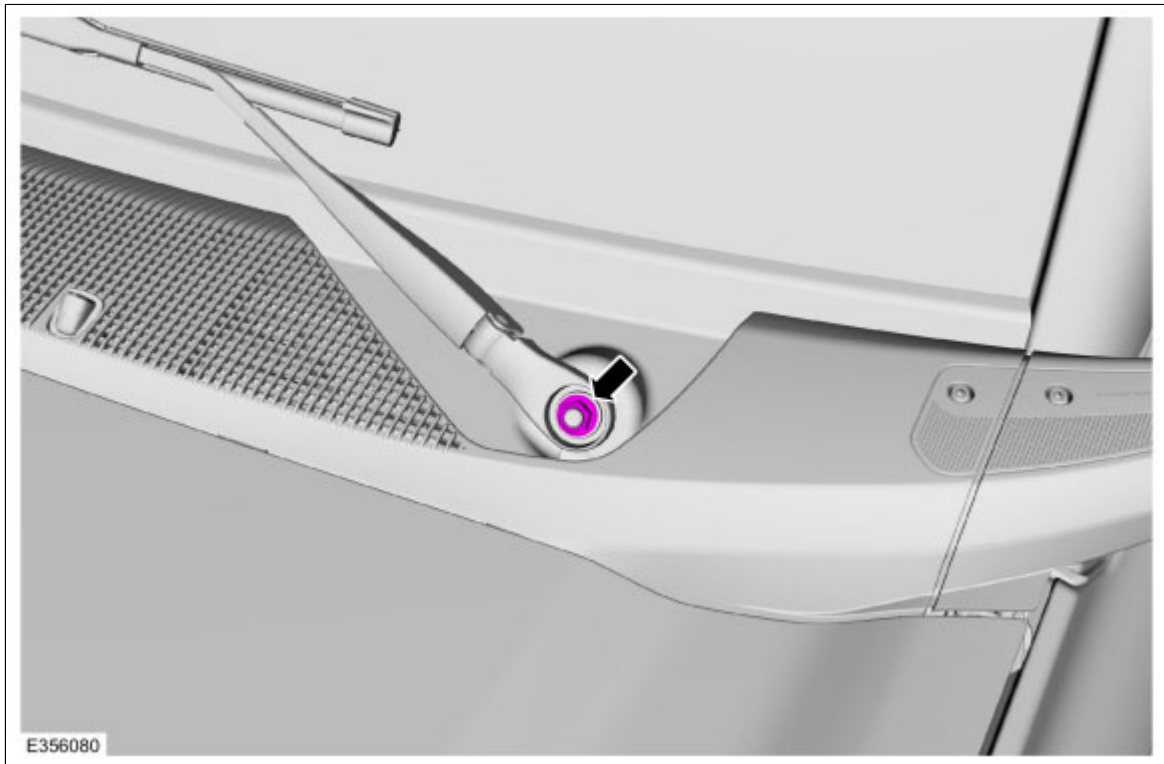

3. **NOTE:** Note the position of the components before removal.

Remove the windshield wiper pivot arm.
Use the General Equipment: Two Leg Puller

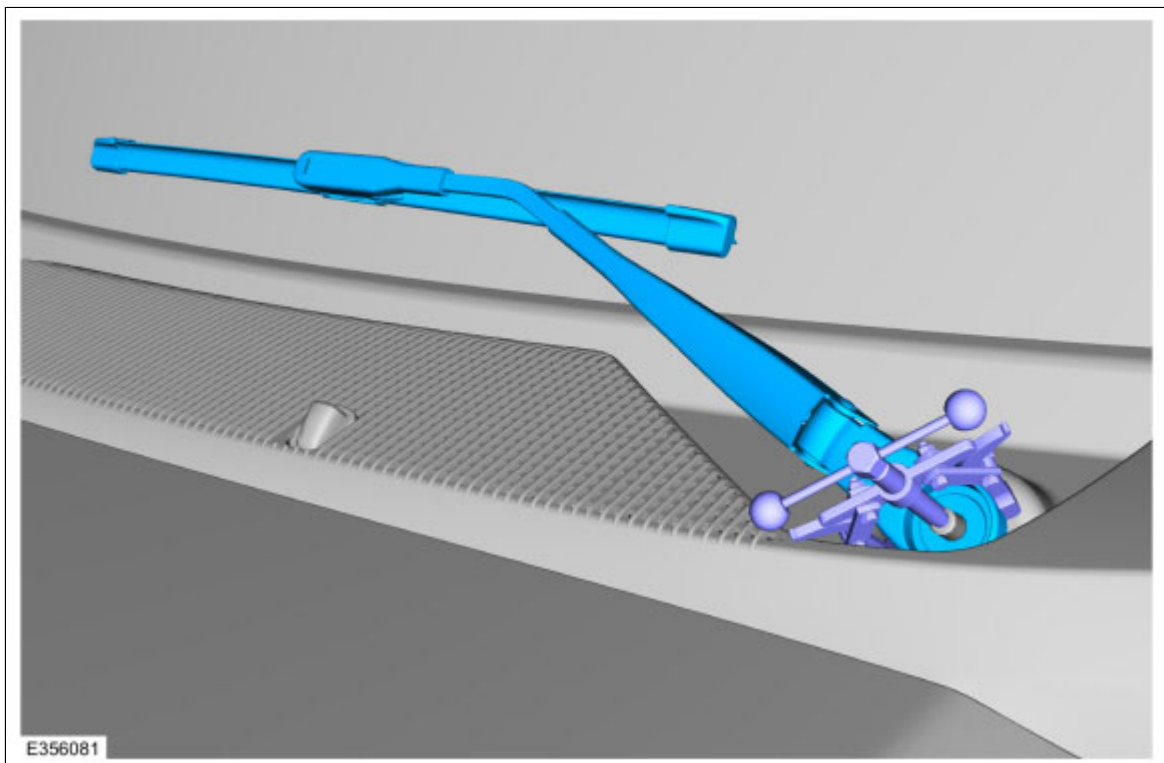




Installation


1. **NOTE:** Before installing the windshield wiper pivot arm(s), make sure that the windshield wiper motor is in the PARK position.

Verify the windshield wiper motor is in the PARK position.


1. Turn the ignition to the ON position.
2. Switch the wipers to the LOW position and allow to cycle.
3. Turn the ignition to the OFF position.

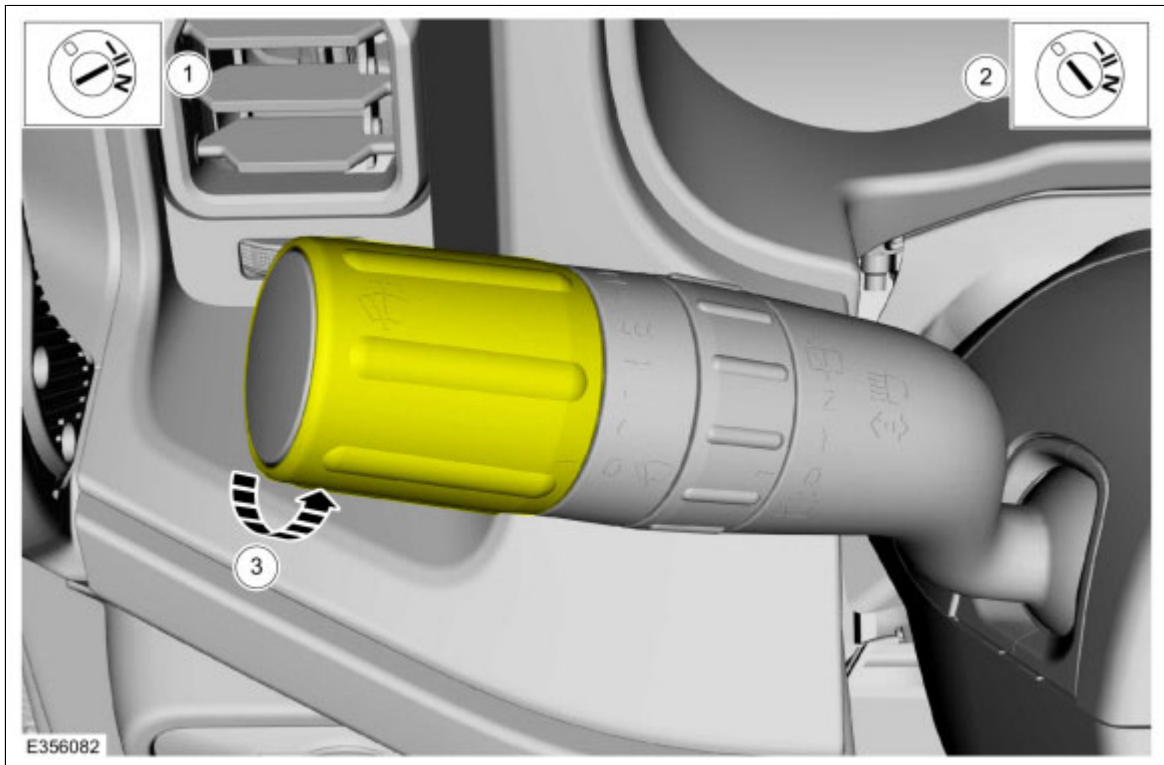

2. Install the windshield wiper pivot arm.
 1. Align the wiper blade with the marks on the windshield.
 2. Install the windshield wiper pivot arm nut.
Torque : 21 lb.ft (28 Nm)

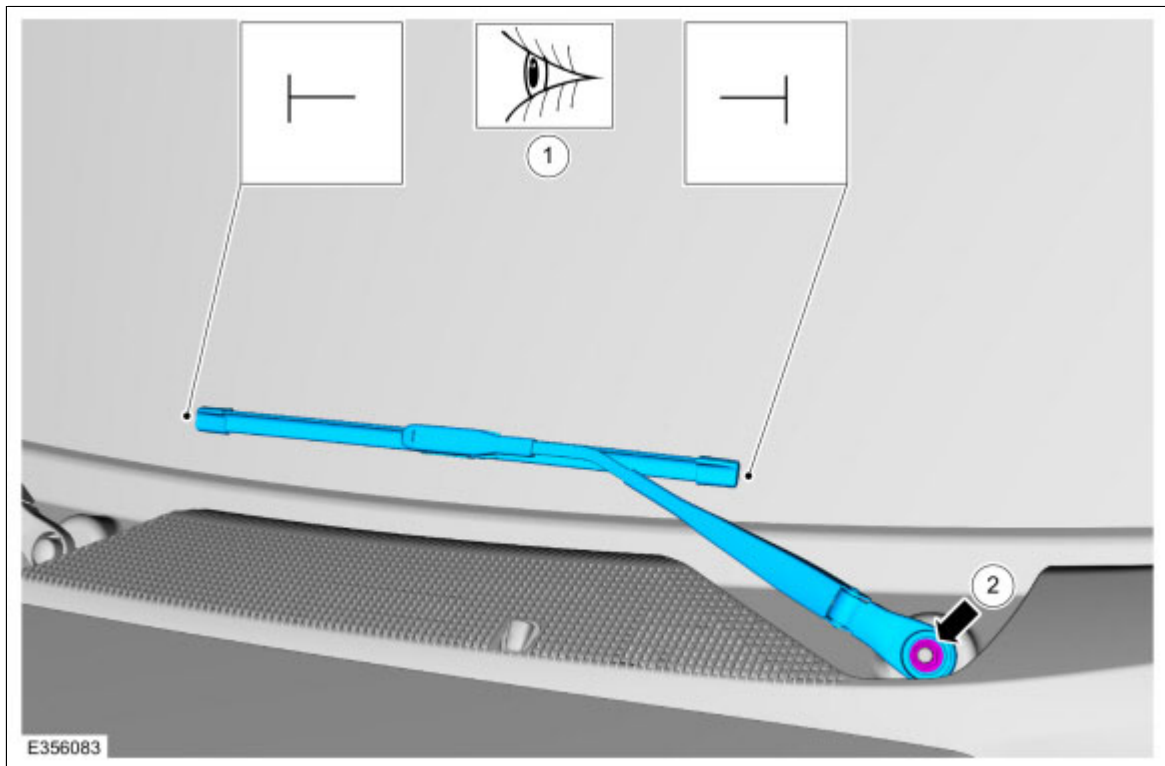

3. Install the windshield wiper pivot arm nut cover.

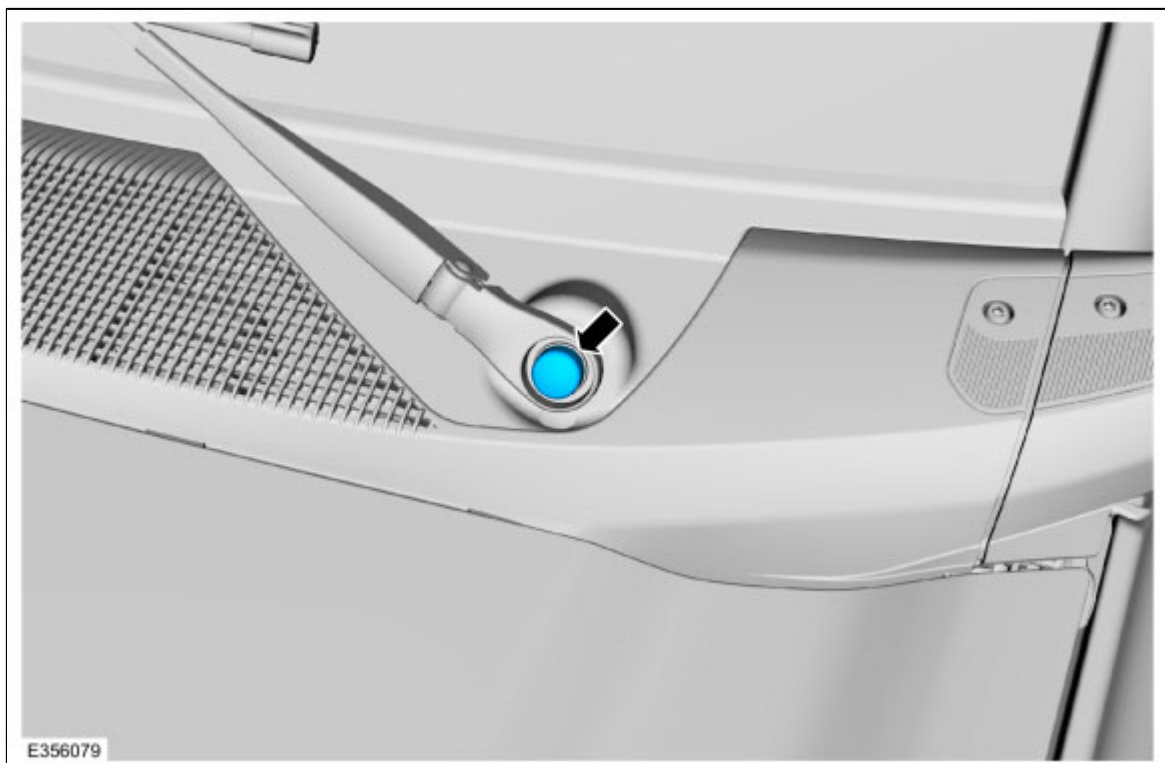

Copyright © Ford Motor Company
