ORACLE LIGHTING

BRONCO LED DASH KIT

ORACLE PART #4237-333

INSTALLATION GUIDE

TOOLS NEEDED:

TRIM PANEL TOOL
T-30 TORX BIT
7MM NUT DRIVER/SOCKET
10MM NUT DRIVER/SOCKET
PHILLIPS SCREWDRIVER
RATCHET

REMOVE T-30 TORX BITS ON DRIVER AND PASSENGER SIDE DOOR HANDLE. (8) TOTAL.

USE A TRIM PANEL TOOL TO EXPOSE 7MM BOLTS

REMOVE THESE (3) 7MM BOLTS

DEPRESS CLIPS IN ORDER TO REMOVE TRIM PIECE

USE PANEL TOOL TO SEPARATE TRIM PIECE FROM DASH

PUSH IN THESE (2) CLIPS TO DETACH GLOVE BOX

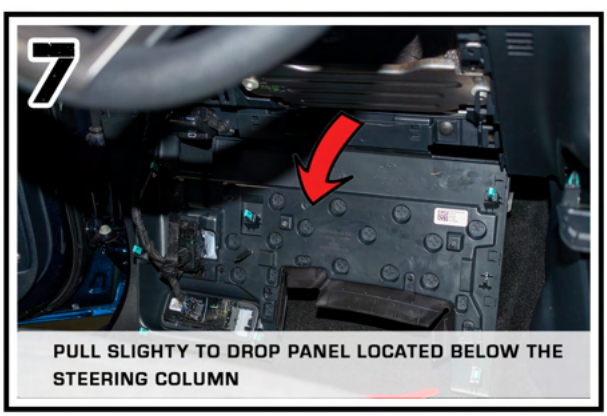

PULL SLIGHTY TO DROP PANEL LOCATED BELOW THE STEERING COLUMN

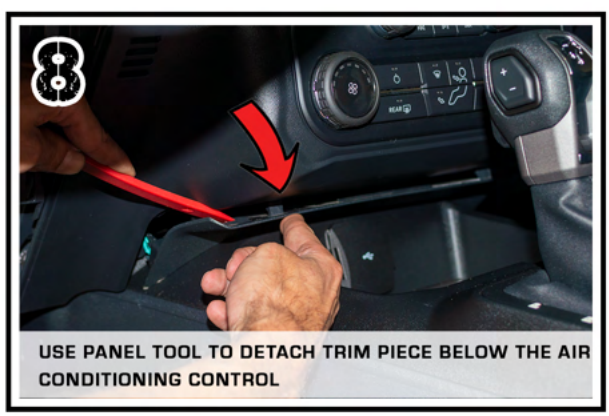

USE PANEL TOOL TO DETACH TRIM PIECE BELOW THE AIR CONDITIONING CONTROL

© 2022 ORACLE LIGHTING

4401 Division St.
Metairie, LA 70002

FOR ADDITIONAL TECHNICAL SUPPORT PLEASE CALL US 1(800)407-5776

REMOVE 10MM BOLT BELOW THE STEERING COLUMN

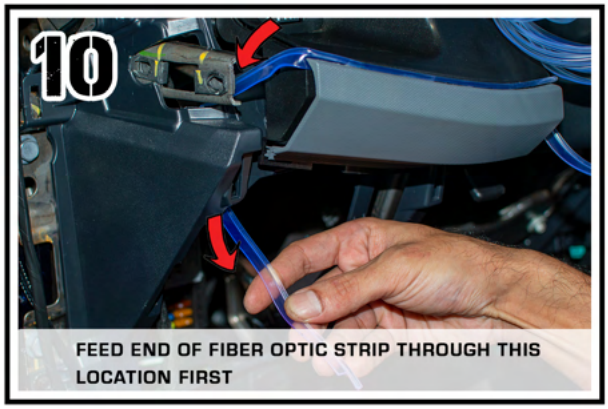

FEED END OF FIBER OPTIC STRIP THROUGH THIS LOCATION FIRST

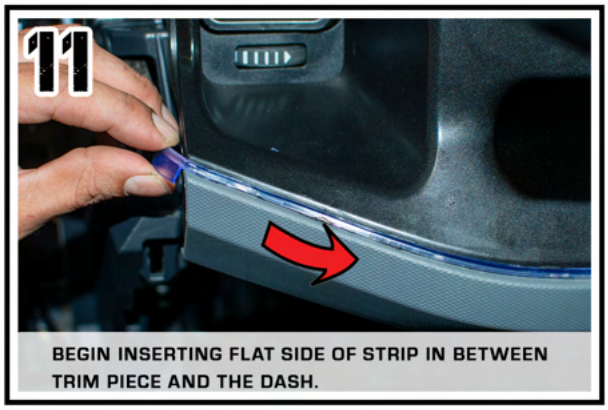

BEGIN INSERTING FLAT SIDE OF STRIP IN BETWEEN TRIM PIECE AND THE DASH.

CONTINUE RUNNING STRIP ALONG THE DASH ABOVE THE STEERING WHEEL

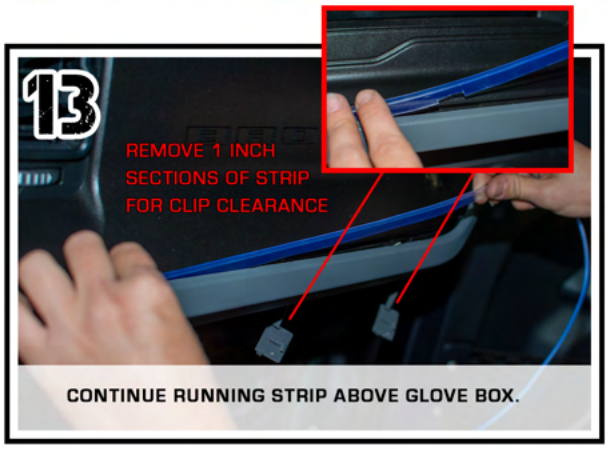

CONTINUE RUNNING STRIP ABOVE GLOVE BOX.

INSERT END OF STRIP INTO THIS LOCATION. STRIP WILL FEED INTO GLOVE BOX AREA.

BEGIN RUNNING TOP STRIP AT THIS LOCATION

END OF TOP STRIP WILL FEED INTO GLOVE BOX AREA

17

BEGIN RUNNING STRIP FROM PASSENGER SIDE TOWARDS DRIVER SIDE

18

CONTINUE INSERTING STRIP ALONG TOP PORTION OF GAUGE CLUSTER

19

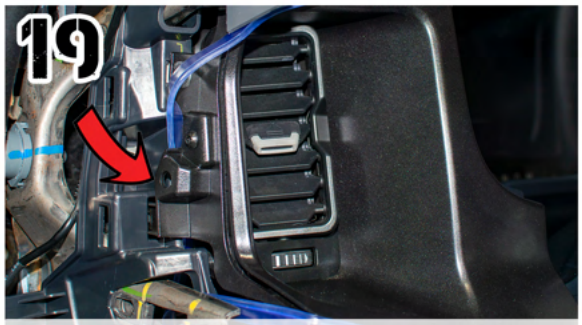

TOP STRIP WILL FEED INTO THIS LOCATION

20

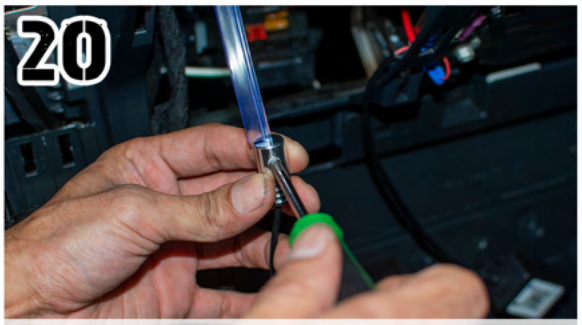

CONNECT (2) LIGHT HEADS TO STRIP END. (1) FOR THE TOP STRIP AND (1) FOR BOTTOM STRIP.

21

ATTACH (2) LIGHT HEADS TO TOP AND BOTTOM STRIPS LOCATED IN GLOVE BOX AREA

22

FEED CABLES INTO AREA BEHIND CENTER CONSOLE. RE-INSTALL ALL TRIM/PANEL PIECES.

23

FEED CABLES INTO AREA BEHIND CENTER CONSOLE

24

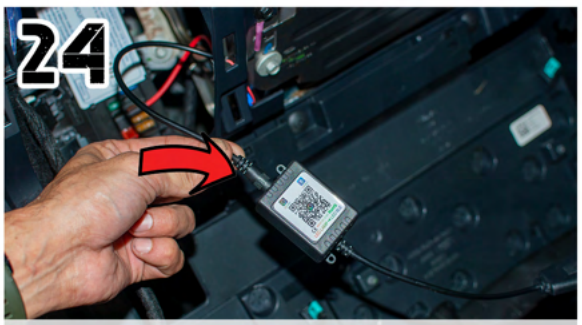

PLUG IN 12V AUX WIRE INTO BLUETOOTH CONTROLLER

© 2022 ORACLE LIGHTING

4401 Division St.
Metairie, LA 70002

FOR ADDITIONAL TECHNICAL SUPPORT PLEASE CALL US 1(800)407-5776

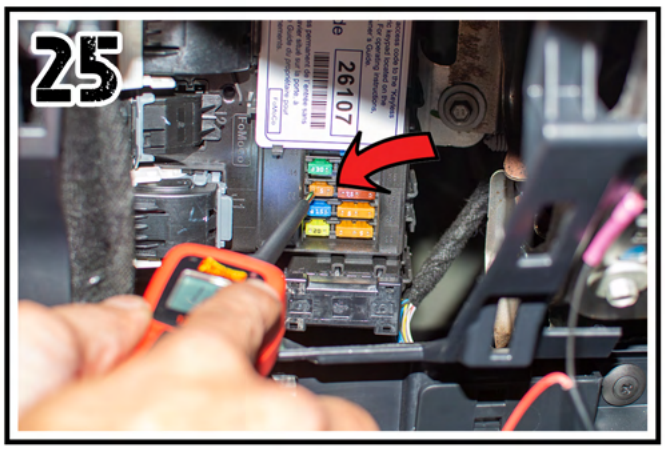

LOCATE 5A FUSE IN FUSE PANEL BY DRIVER SIDE DOOR. REMOVE THIS FUSE.

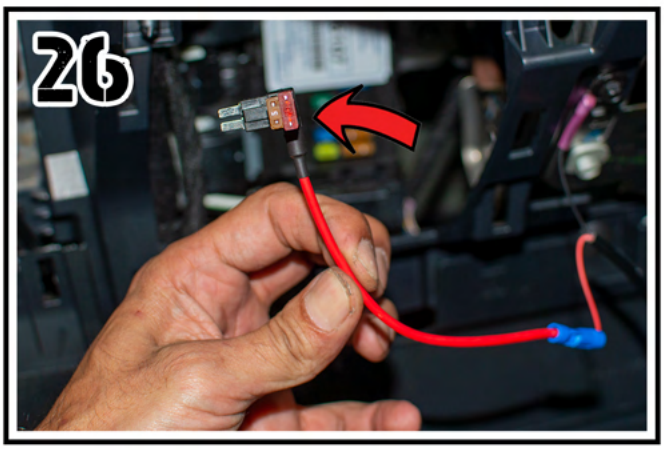

USING AN ADD-A-FUSE CIRCUIT, PLACE 5A FUSE INTO HOLDER

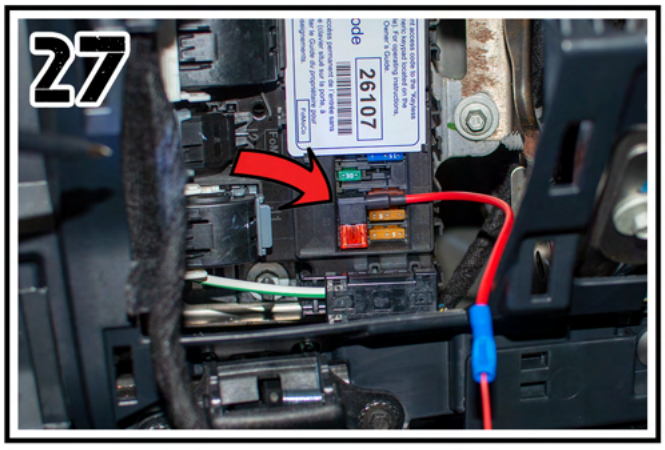

PLACE THE ADD-A-FUSE CIRCUIT INTO 5A FUSE SLOT

ADD-A-FUSE CIRCUIT CONNCECTS TO RED WIRE.
BLACK WIRE GROUNDS TO NUT IN PICTURE ABOVE.