

14290

HEADLAMP ASSEMBLY PASSENGER SIDE

Pin 2 - Green Wire coming from AVS Light Bar


This is the only wire you tap into on this side

HEADLAMP ASSEMBLY DRIVER SIDE

Pin 10 - Black ground wire coming from AVS

Pin 9 - Brown wire coming from AVS

Pin 2 - Yellow wire coming from AVS

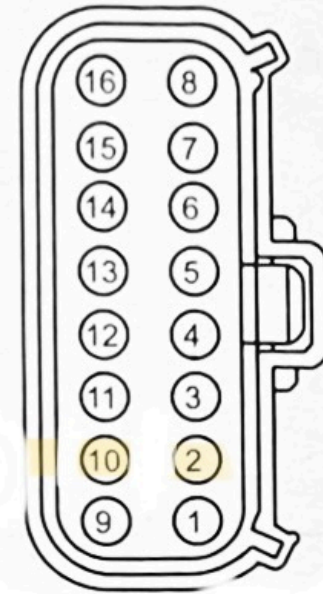

I found it to be easier to install this light (wiring) by removing the grill, small bumper panel (just above bumper) this is held in with clips and pops out fairly easy. I then removed both headlights to access the harnesses to tap into. Some have stated that dropping wheel well cover to access harnesses was their method, this is good too, but I'm only offering an alternative way to install that worked for me.

I would also suggest prior to installing the plastic light bar holder onto the hood, that you wrap your edges with satin black vinyl film (for vehicles that are not black). This adds full color transparency, in my opinion.

If you need help or have questions, please reach out anytime. Thank you

Justin @ Austin Auto Spa

512-348-7733 | Justin@atxautospa.com